

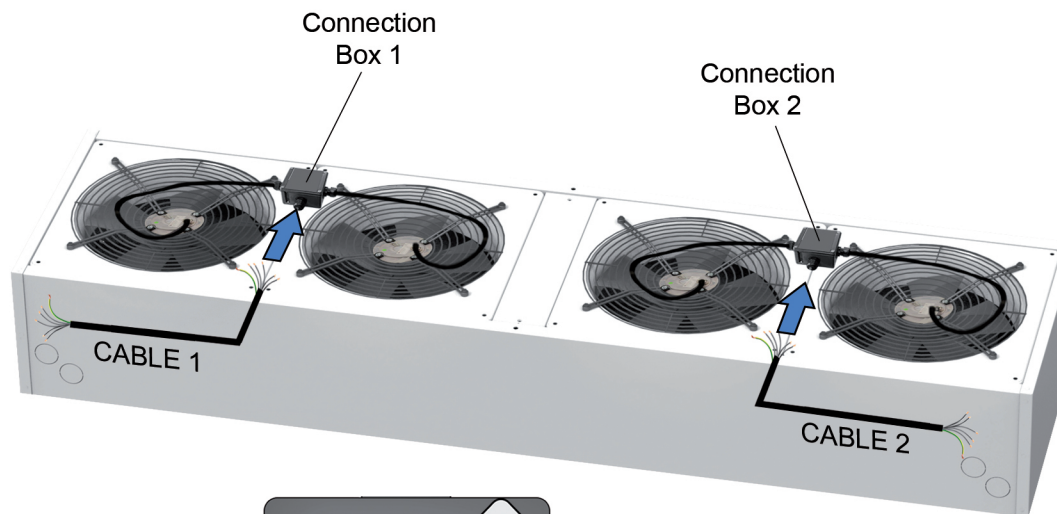
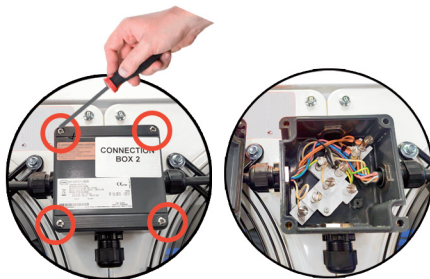


1


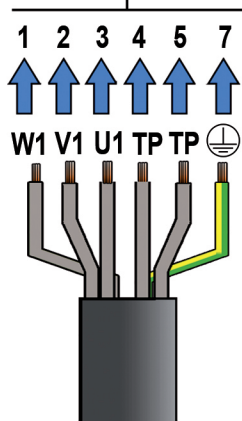


2

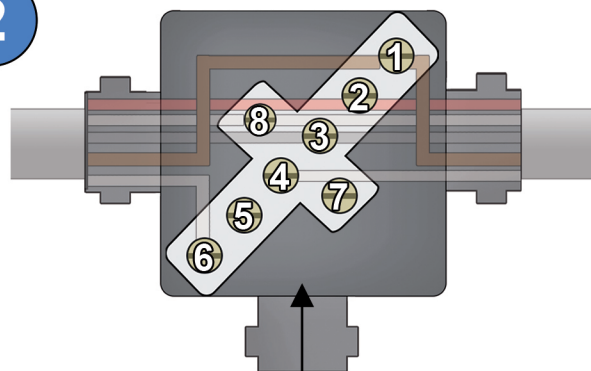

400V ~ 3 50Hz

**CABLE 1:  
POWER SUPPLY**  
(Connection box 1)

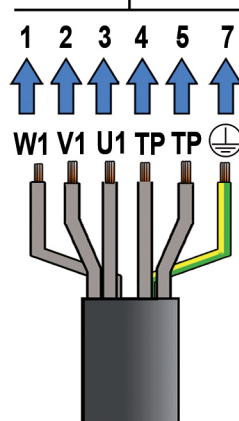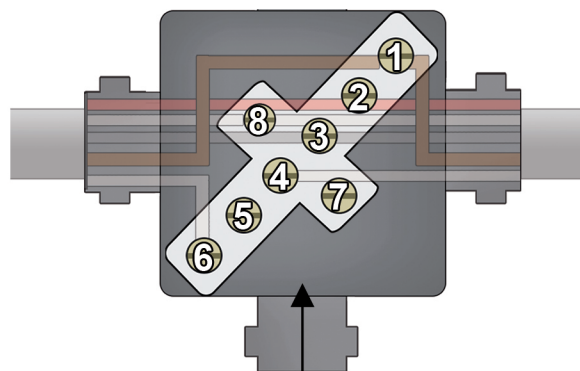

400V ~ 3 50Hz

**CABLE 2:  
POWER SUPPLY**  
(Connection box 2)

3

**Attention! Check the fan's  
direction of rotation**

*When turning, it must follow the arrow on the housing sticker. If the fan turns upside down when the fan is started, the installer will have to change the phases until it rotates in the correct direction.*

