



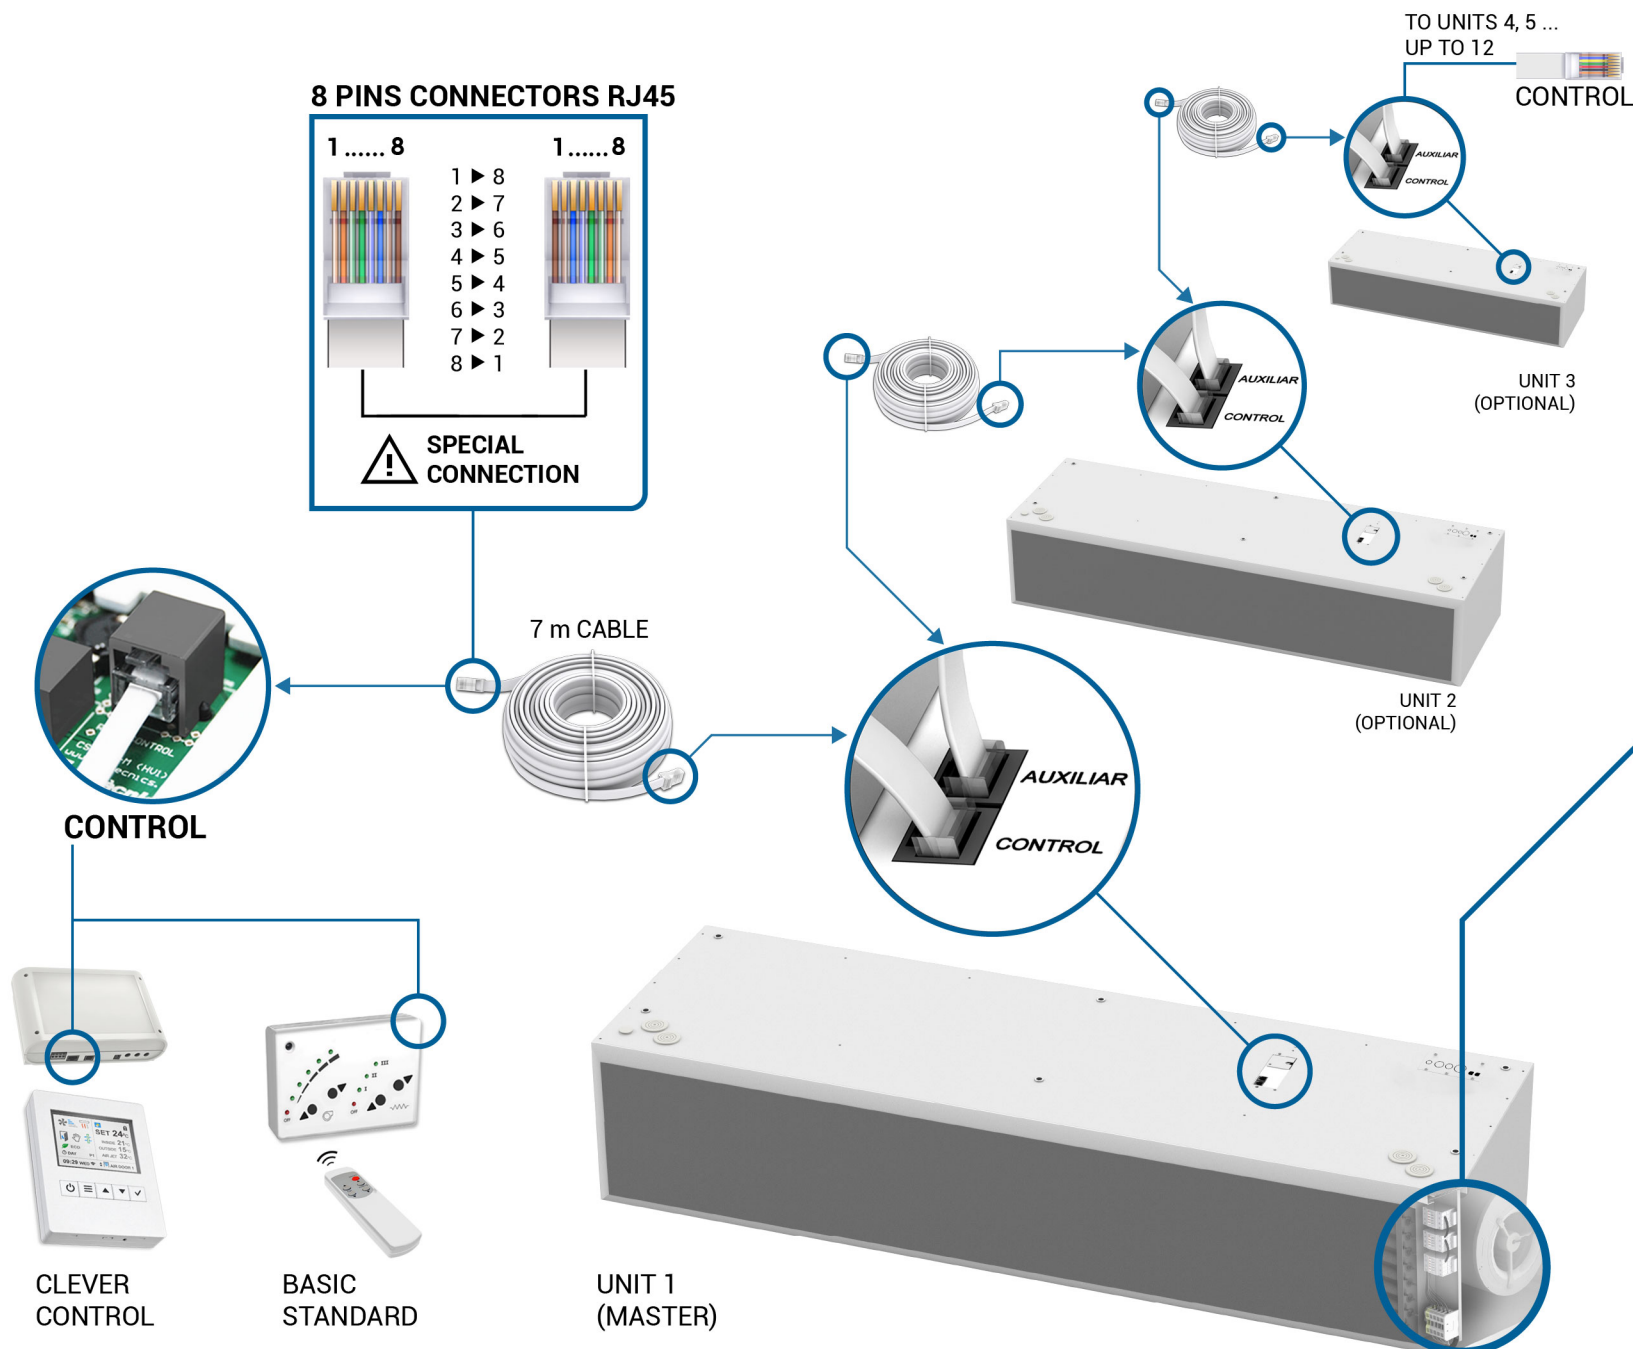

ELECTRICAL HEATING


1. Open the service door.

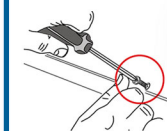

2. Pass the cable through the holtdown to the power terminal.



3. Connect the cables at the electrical heating element as the picture shows:

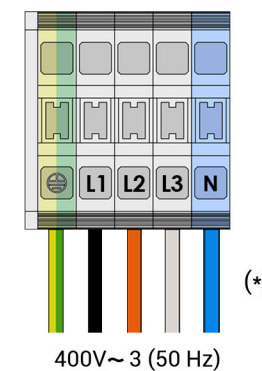

(*) Depending on the power of electrical heating, you may need two or three separated power supply lines.