


CONTROLS



CLEVER PRO (optional) ADVANCED PRO (standard)



The control cables and air curtain cables can be connected to either COM1 or COM2.

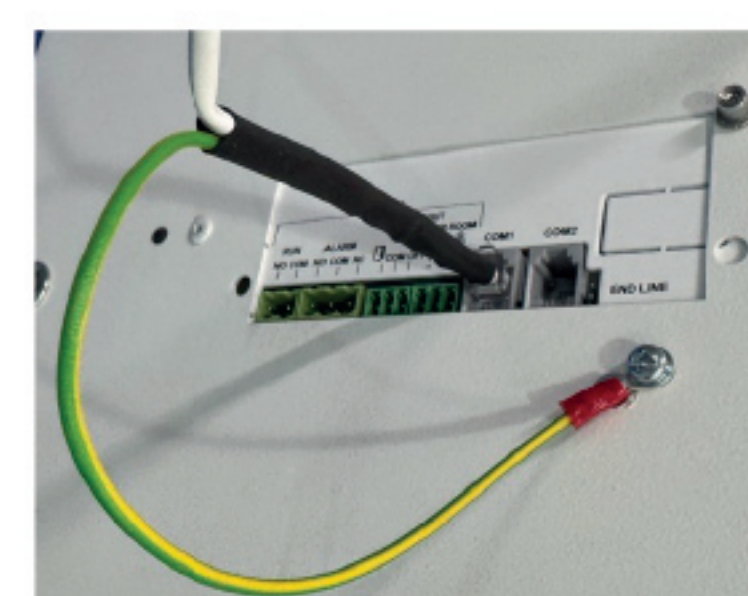


Connect to ground if the cable is shielded

AIR CURTAIN 2 (SLAVE)




ADD UNITS 3, 4... UP TO 12

When multiple air curtains are connected to an only control, the last one must incorporate a Jumper in "END LINE" pins.

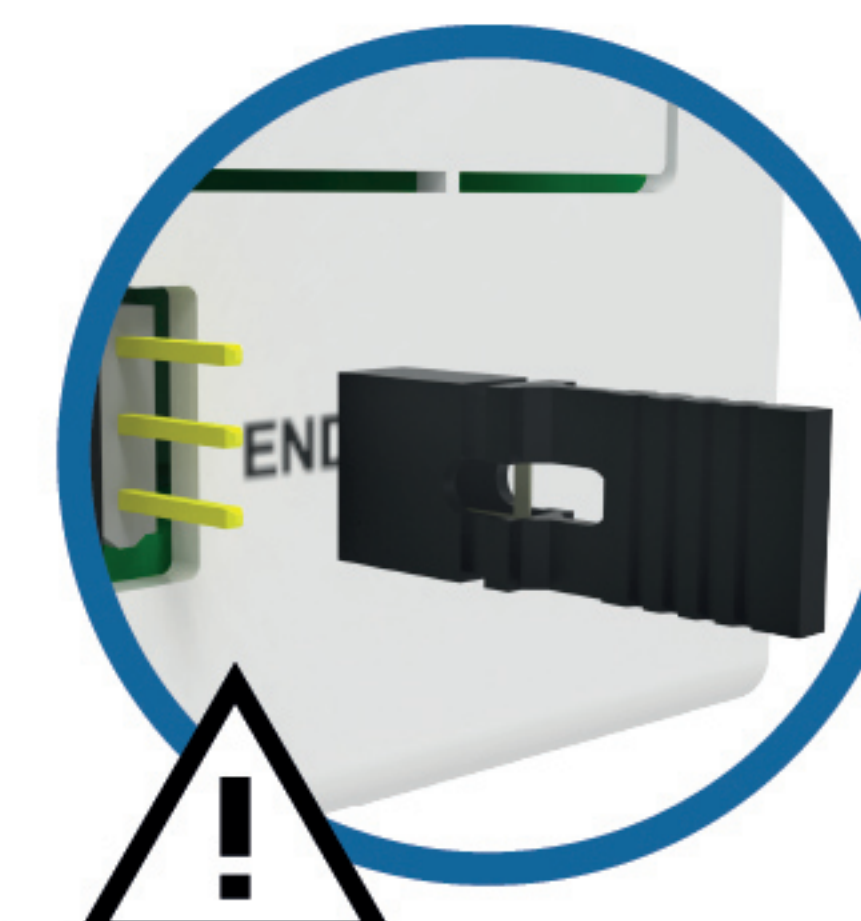


4 PINS CONNECTOR RJ11
Are used for the connection to the control and also to the slaves air curtains connected

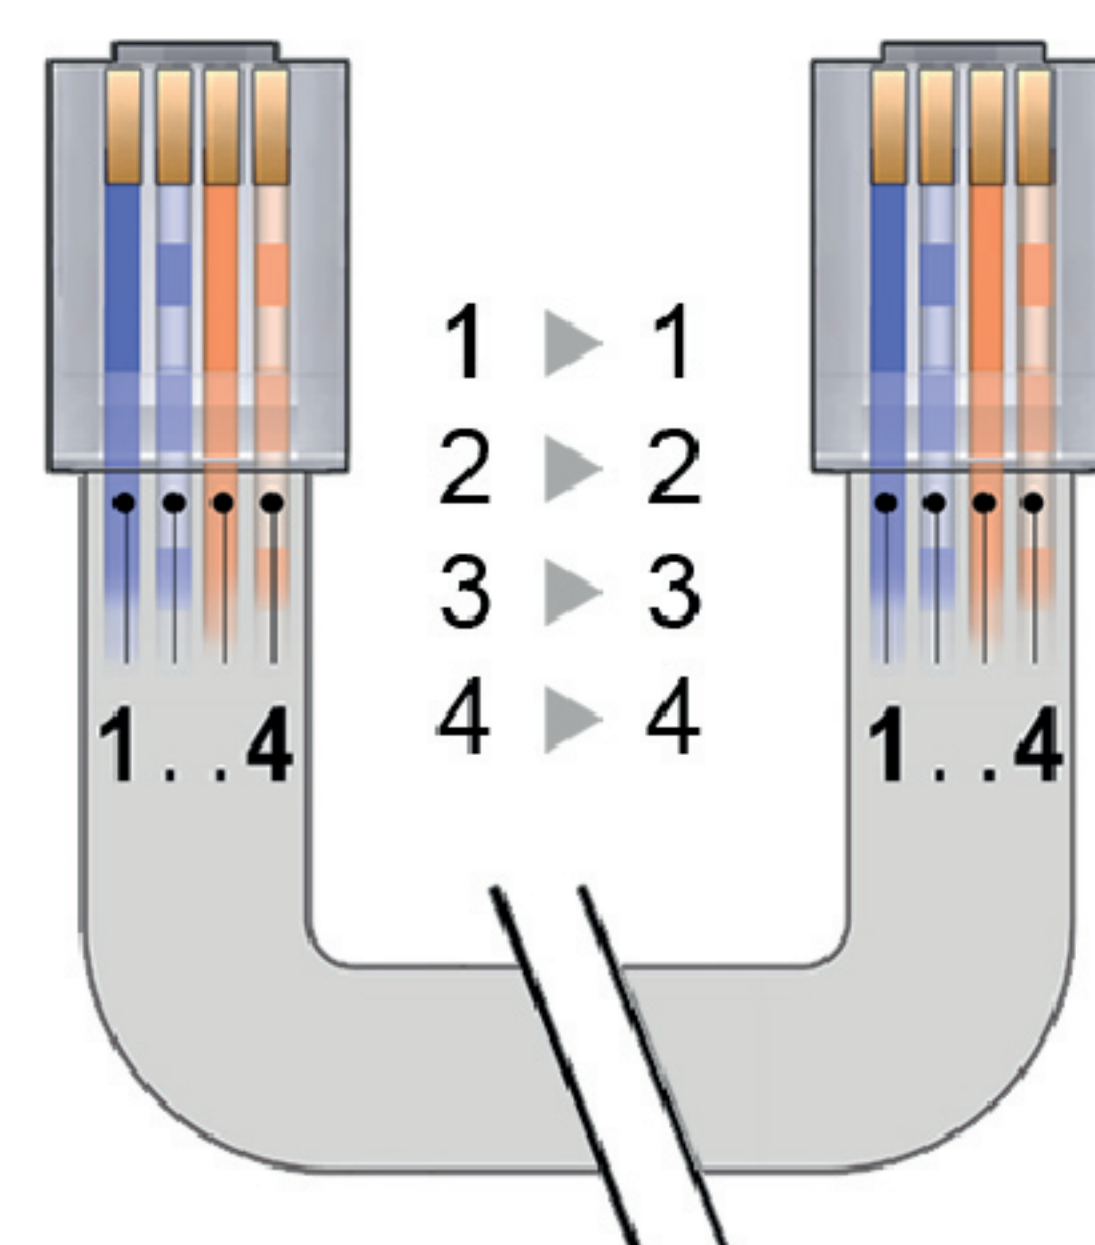


OPTIONAL WATER HEATING VALVES:

Addon Modulating Valve

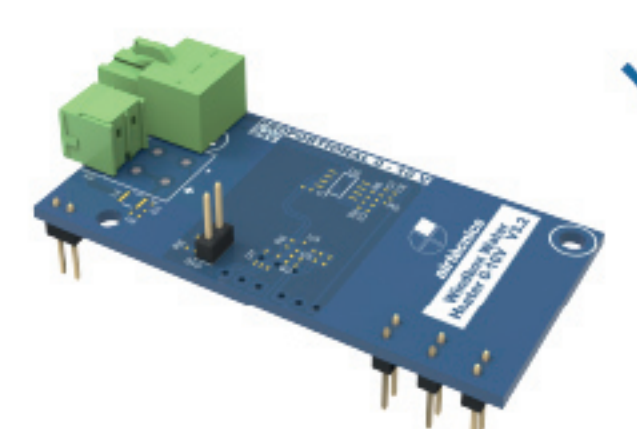


Addon ON/OFF Valve (standard)

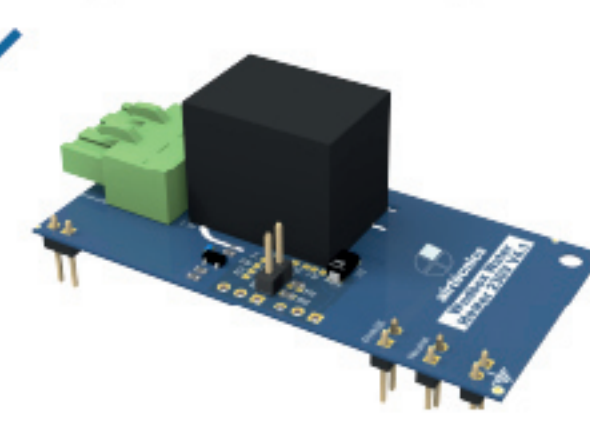

+ 0-10V
- GND
- 24VDC
+ GND
MOD. VALVE

WARNING ONLY FOR SOLID STATE VALVE 220-240Vx1

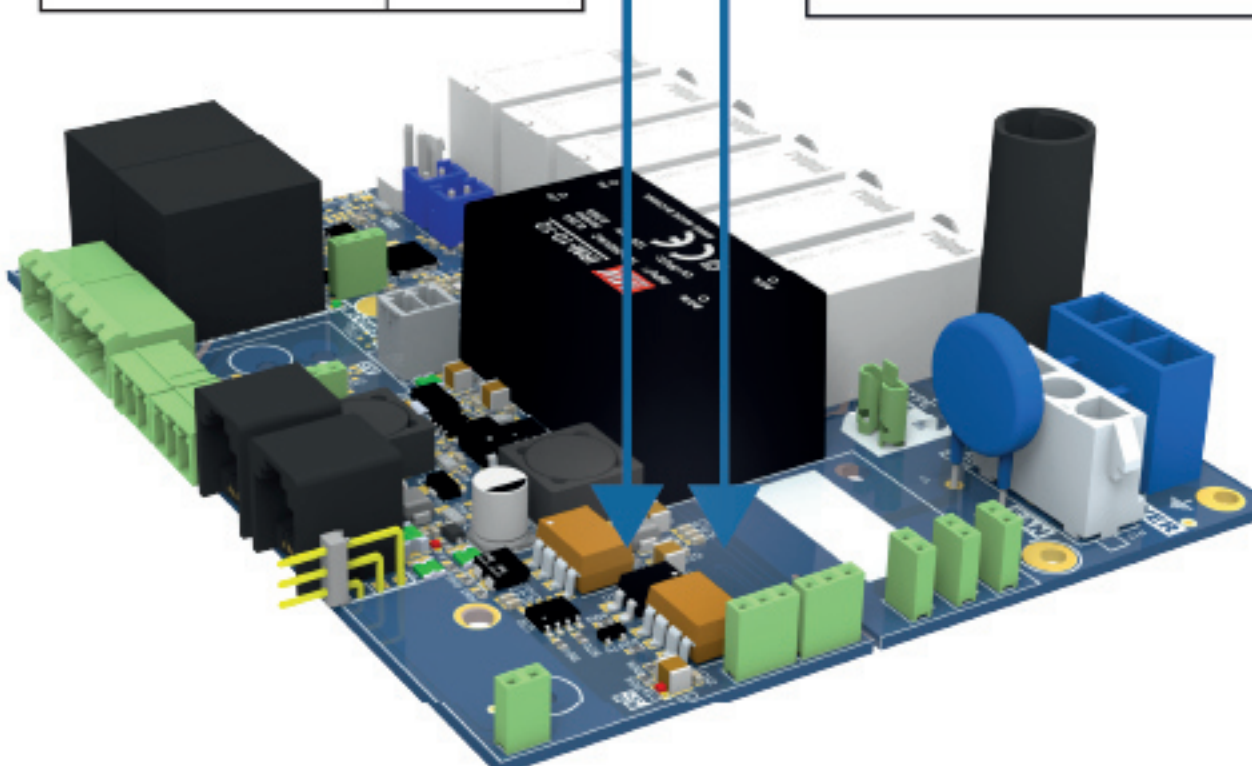

*RUND DETAIL:



ZEN DETAIL*:




AIR CURTAIN 1 (MASTER)



Remove the screws and open the door.

1~PHASE POWER SUPPLY


WATER or UNHEATED

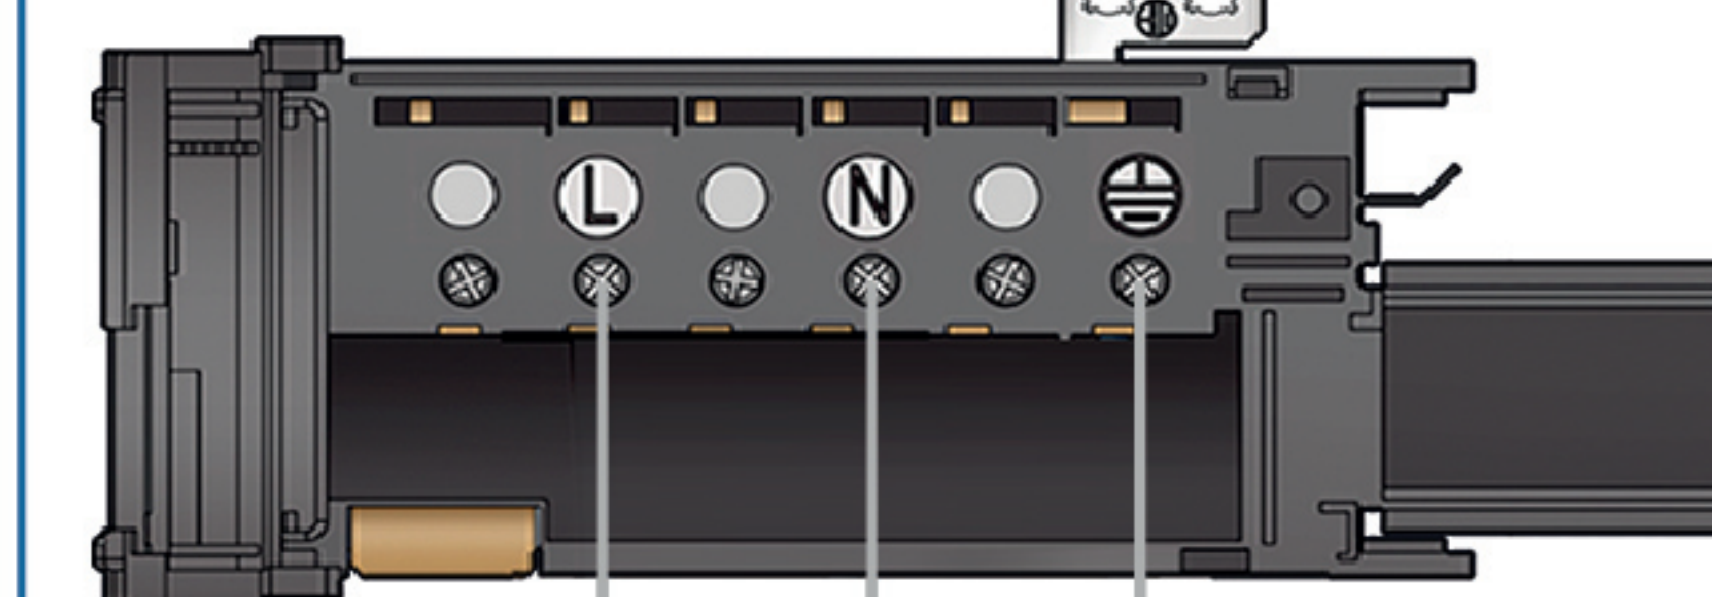

L N
230V~1 (50Hz)



3~PHASE

ELECTRICAL HEATING UP TO 18KW (MG models)

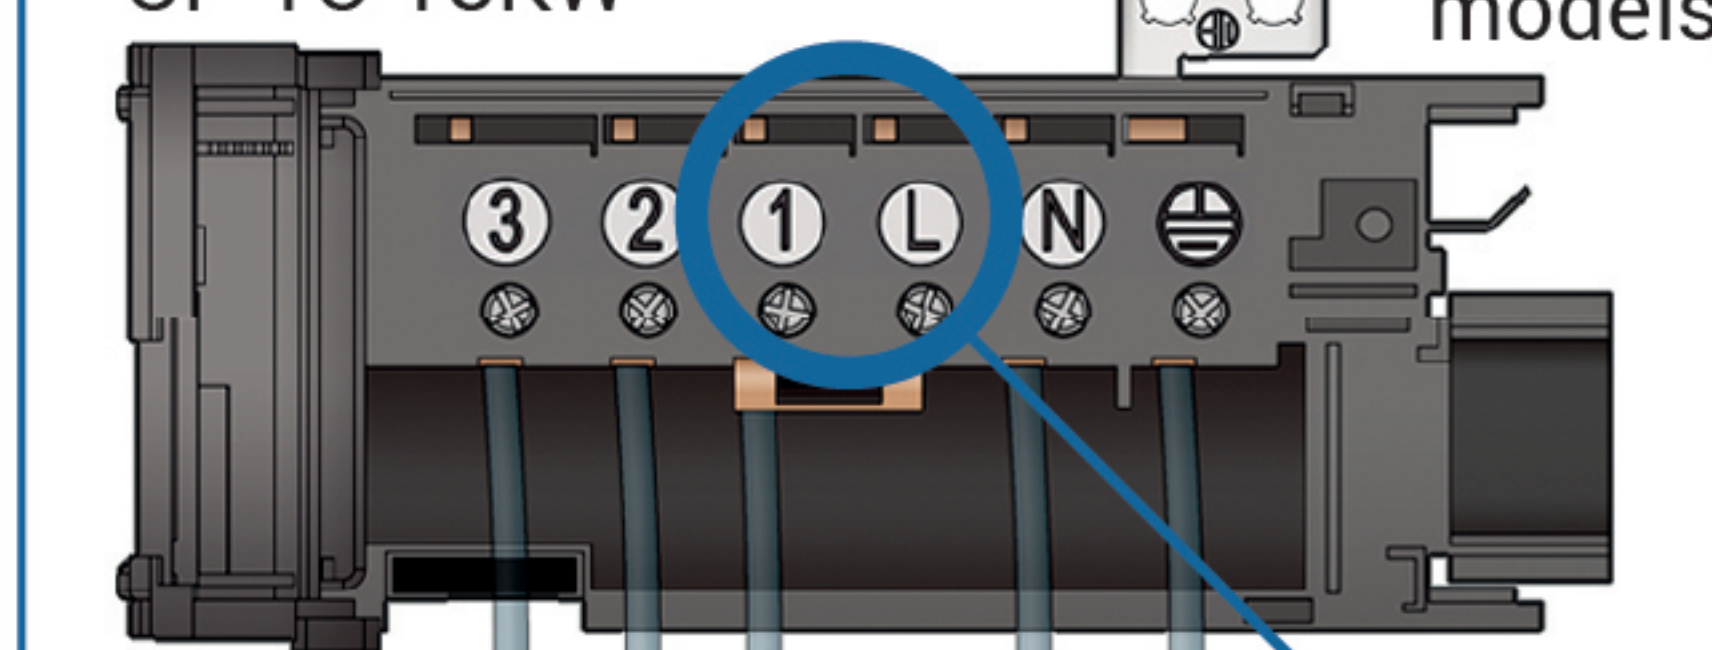


L3 L2 L1 N
400V~3 (50Hz)

Bonding Jumper 1 - L

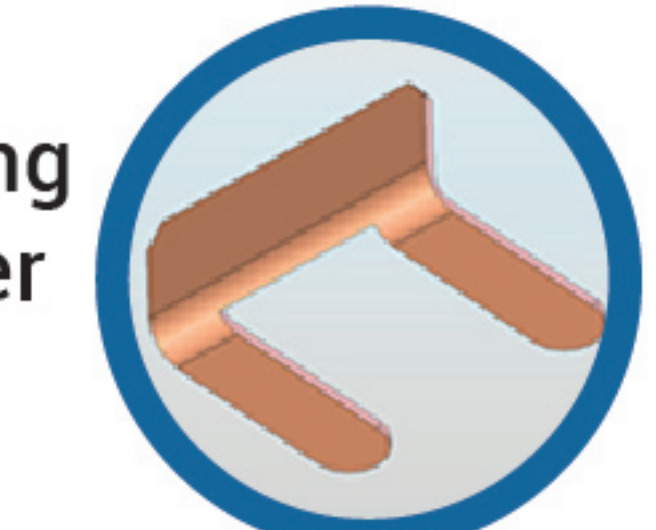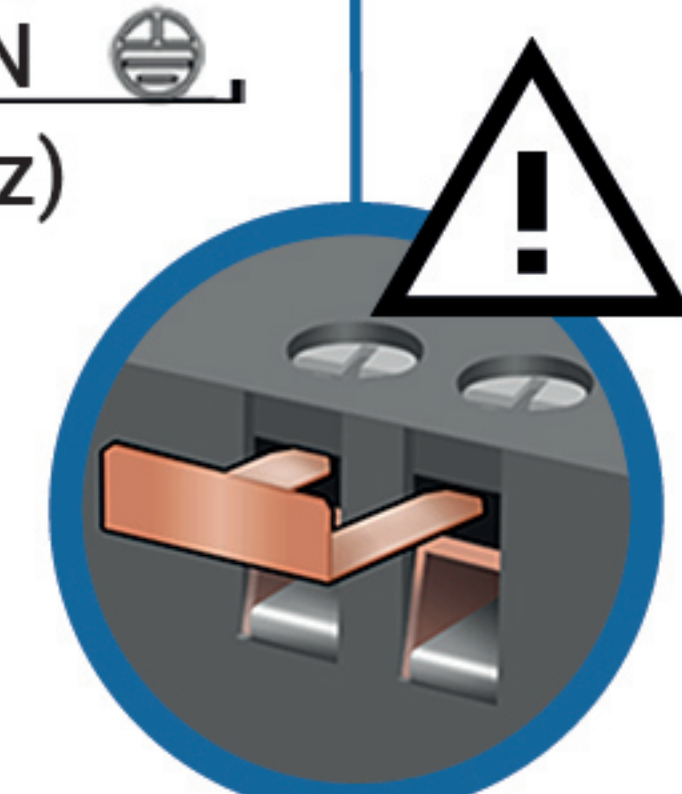

ELECTRICAL HEATING

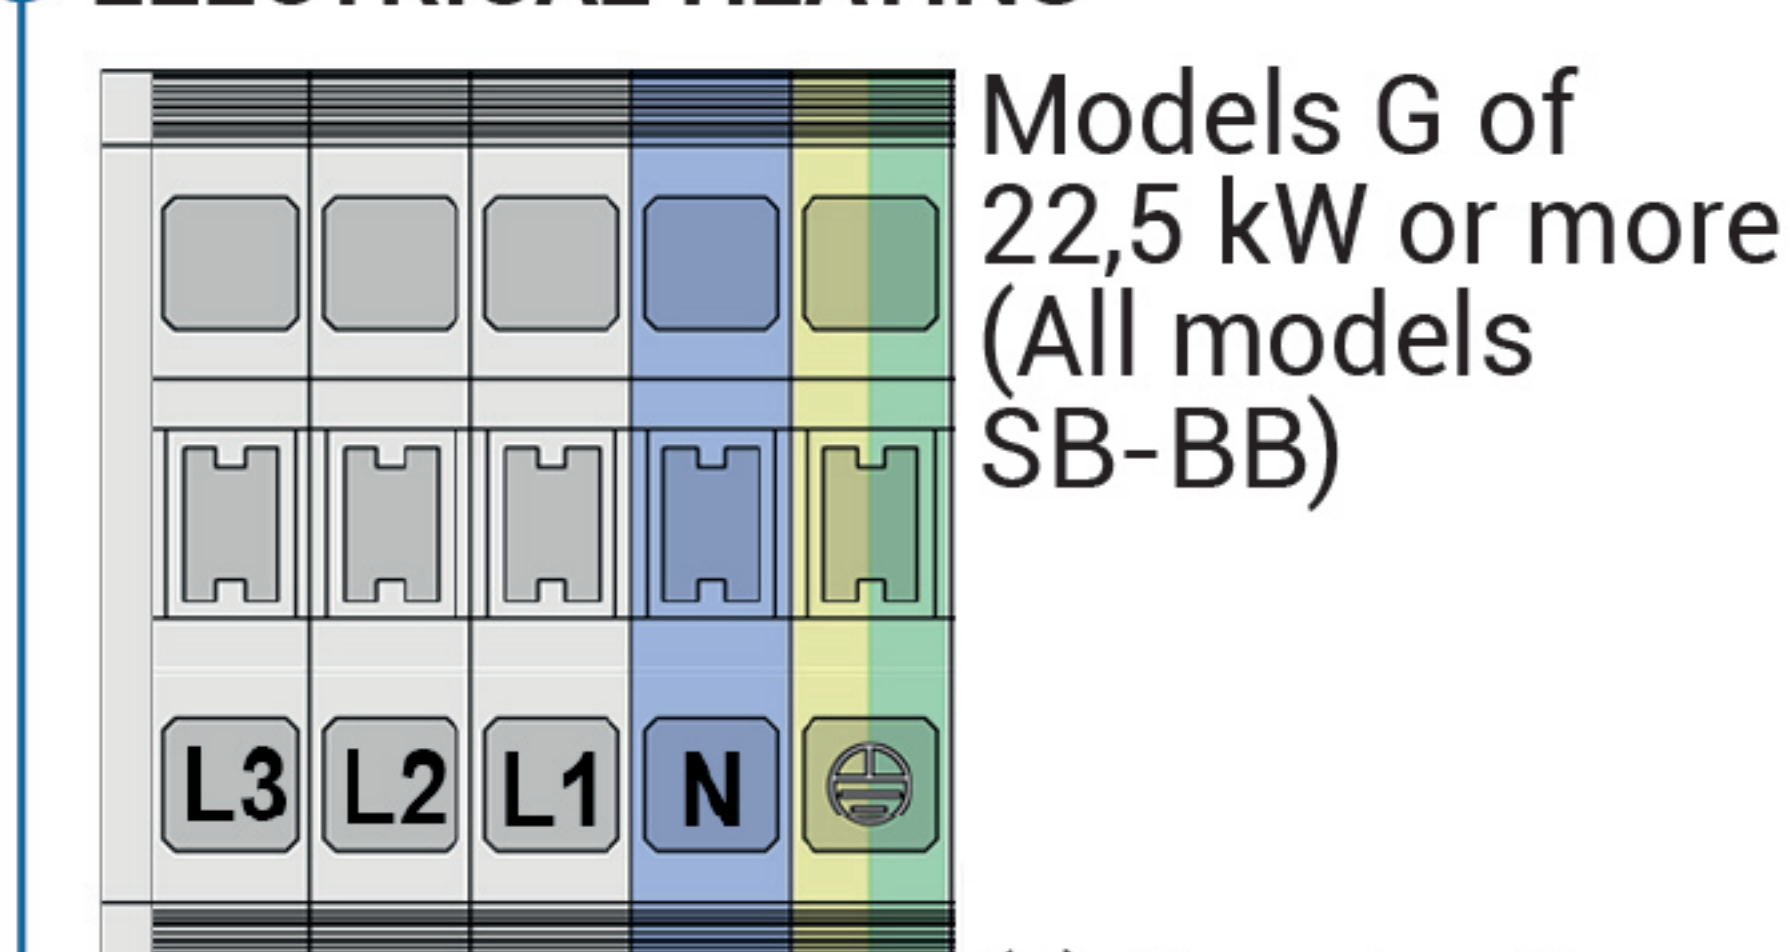

Models G of 22,5 kW or more (All models SB-BB)
(*) Greater than 30 kW (included), the air curtains have 2 power sources.
400V~3 (50Hz)

INTERNAL CONNECTION BOX
INTERNAL CONNECTION

(DOUT) RUN OUT (Free Voltage Output)
(DIN2) CLOSED: UNIT OFF
(DIN1) CLOSED: DOOR CLOSED
(AIN) TEMPERATURE INDOOR
(AIN) TEMPERATURE OUTDOOR
ALARM SIGNAL (OK, CLOSED) (Free Voltage)
ALARM SIGNAL (OK, OPEN) (Free Voltage)