



SÓLO CALOR:
SW5-1 ON; SW5-2 OFF; SW5-3 OFF
ONLY HEATING:
SW5-1 ON; SW5-2 OFF; SW5-3 OFF

400Vx3 / 50Hz


Unidad Exterior Clivet
Clivet Outdoor Unit

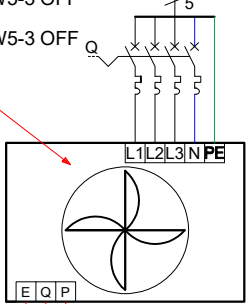


Clivet		KIT		ENC1		SW9-3		SW9-4	
kW heating	HP	CN22	CN24	CN21	CN36	CN38	CN56	CN55	CN54
10, 12	3.2	AHUKZ-01F		7					
13	4	SW10-1 off / 2 on		9					
15, 16	5			B					
21	6.5			D					
24, 25, 26	7	AHUKZ-02F		F					
29	8	SW10-1 on / 2 off		E					
34	10			0					

 

Clivet control DX

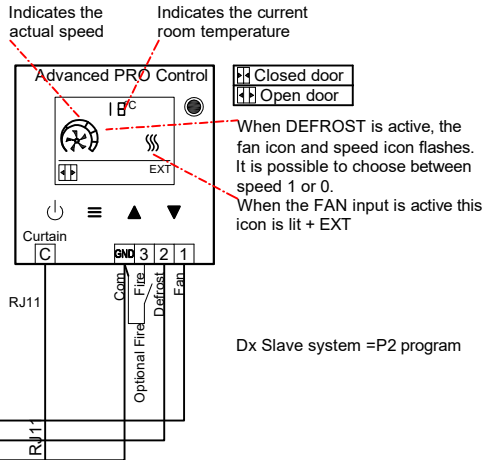

Dx Slave system =P2 program

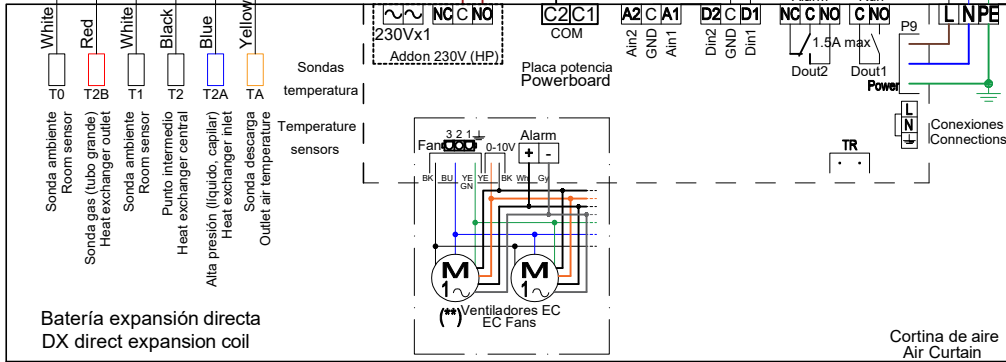

Conexiones entre Airtécnicos (Advanced Pro) y Clivet (Kit-Dx)		
Connections between Airtécnicos (Advanced Pro) and Clivet (Kit-Dx)		
A. Pro	Dx-kit	Señal
1	R + C	Fan, pone en marcha el equipo
	Run	Fan, starts the equipment
2	D + C	Defrost, si se conecta limita la velocidad en defrost.
	Defrost	Defrost, if connected, it limits the speed in defrost.
3		Alarma de incendios (Opcional). Detiene y bloquea
		Fire alarm (Optional). Stops and blocks

Otras conexiones Clivet	
Another connections Clivet	
L, N, PE	Alimentación
	Power supply
EEV	Válvula de expansión
	Expansion valve
X1&X2	Control Clivet DX
	Clivet DX Control
EQP	Unidad Exterior
	Outdoor Unit

Conexiones entre Airtécnicos (cortina) y Clivet (Kit-Dx)		
Connections between Airtécnicos (air curtain) and Clivet (Kit-Dx)		
Cortina	Dx-kit	Señal
Air Curtain	Water L	Fallo cortina = alarma boya
Wire 1, 2 (Ok error)		(Fallo=Abierto, No fallo=cerrado)
White	T0	Sensor Aire (aspiración)
		Air Sensor (Inlet)
White	T1	Sensor Aire (aspiración)
		Fresh Air Sensor (Inlet)
Yellow	TA	Sonda descarga
		Outlet air temperature
Black	T2	Punto intermedio
		Heat exchanger intermediate
Blue	T2A	Sensor de alta presión y líquido (Tubo capilar)
		High Pressure and Liquid Sensor (capillary Pipe)
Red	T2B	Sensor de gas (Tubo grande)
		Gas Sensor (big Pipe)

(*) Disponible en 230Vx1 según modelo de unidad exterior
(*) Available 230Vx1 depending to the outdoor unit model
(**) Temperature sensors already installed in the direct expansion coil
(**) Sensores de temperatura ya instalados en la batería expansión directa