


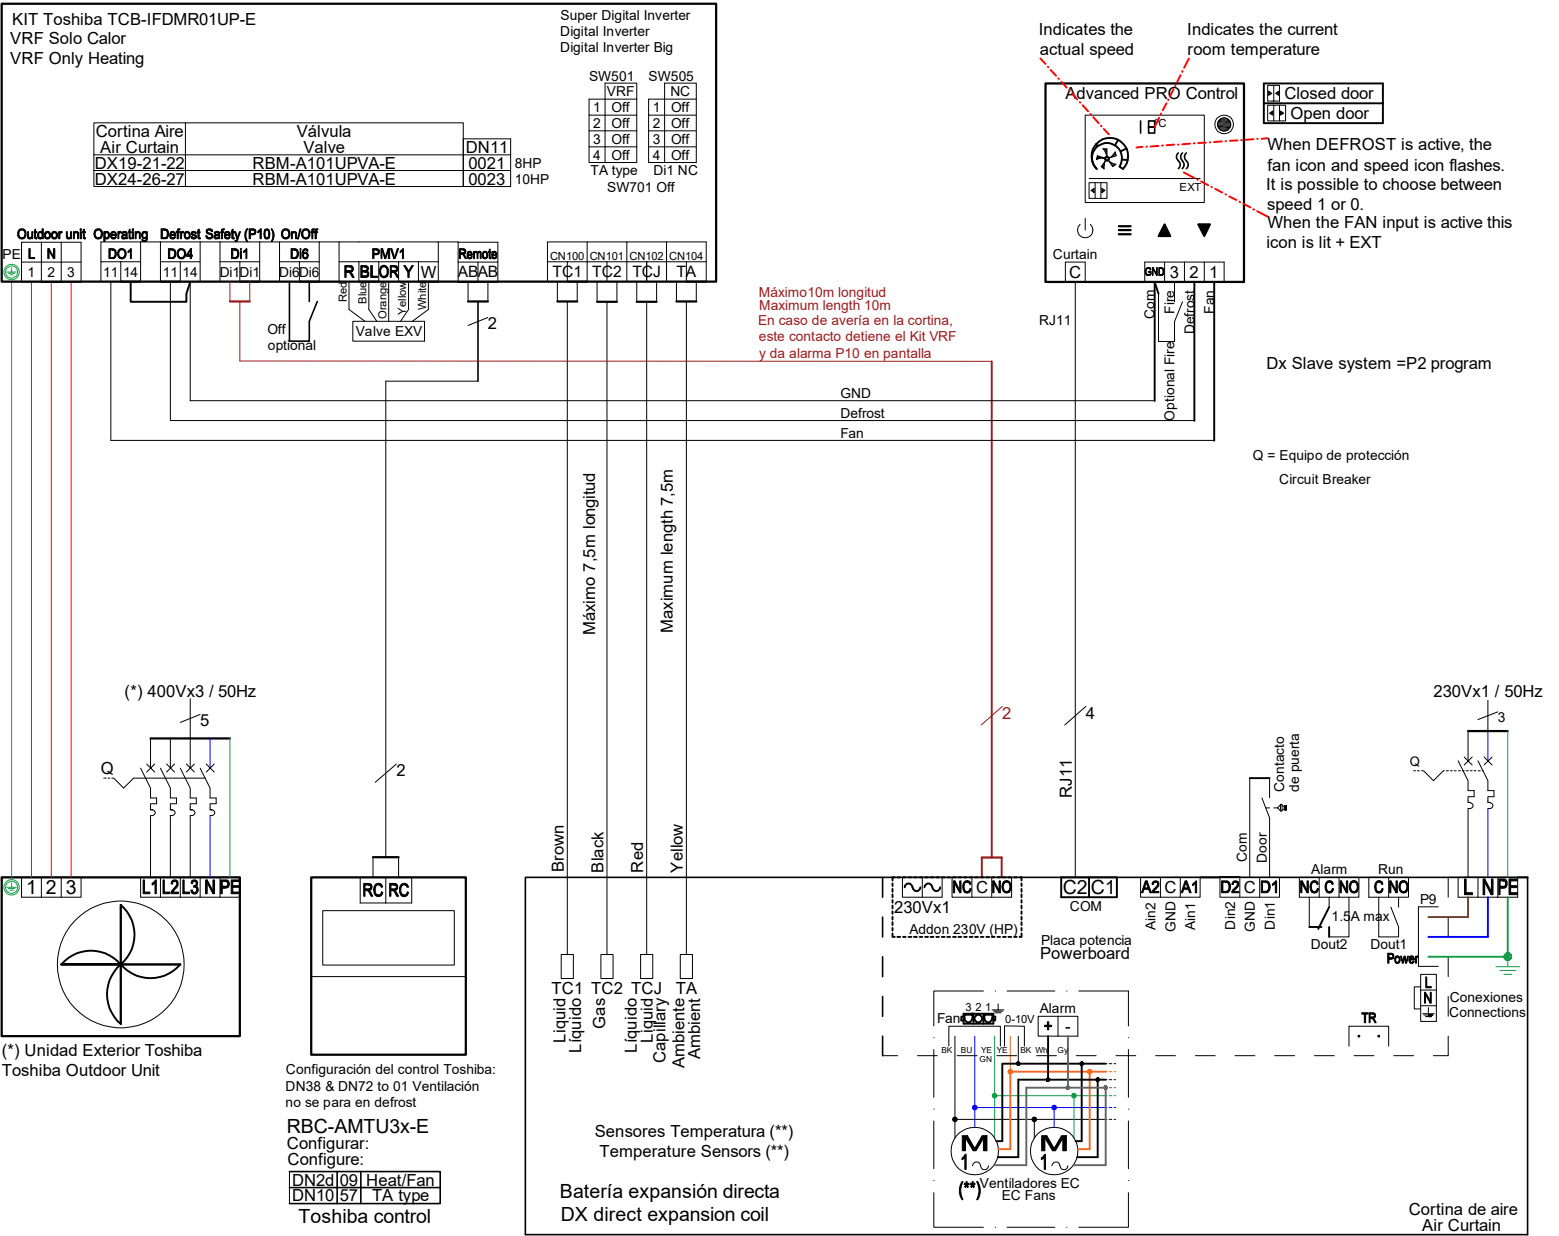

Otras conexiones Toshiba Another connections toshiba	
L, N, PE	Alimentación Power supply
A&B	Control Toshiba DX Dx Toshiba Control
PE, 1, 2, 3	Bus. Unidad Exterior Outdoor Unit Bus
Di 6	External Off optional Closed is KIT ON

Conexiones entre Airtécnicos (cortina aire) y Toshiba (Kit-DX) Connections between Airtécnicos (air curtain) and Toshiba (Kit-DX)	
Cortina Aire Air Curtain	DX-kit
	Señal Signal
C, NO	Di 1 Error P10
	Contacto seguridad Safety contact
TA	CN104 Sonda ambiente Ambient sensor
TC	CN101 Sonda punto intermedio Middle point sensor
TCJ	CN102 Sonda líquido en capilar Capillary liquid sensor
1, GND	DO1 FAN (Operating) FAN (Oper)
2, GND	DO4 Desescarche Defrost

(*) Disponible en 230Vx1 según modelo de unidad exterior
(*) Available 230Vx1 depending to the outdoor unit model
(**) Sensores de temperatura ya instalados en la batería expansión directa
(**) Temperature sensors already installed in the direct expansion coil
La cortina de aire, el control Slave DX y el Kit-DX deben estar en un radio de 10m (señales libres de potencial)
Air curtain, Slave DX controller and Kit-DX cannot be separated more than 10m (free voltage signals)

ESQUEMA ELÉCTRICO CORTINA DE AIRE
Air Curtain Wiring Diagram

Cortina aire ventiladores EC con Bomba Calor - Toshiba VRF sólo Calor, Kit TCB-IFDMR01UP-E, RJ11 Slave DX
EC fans air curtain with Heat Pump - Toshiba VRF only Heating, TCB-IFDMR01UP-E kit, RJ11 Slave DX