









OPTIONAL SOLENOID VALVE

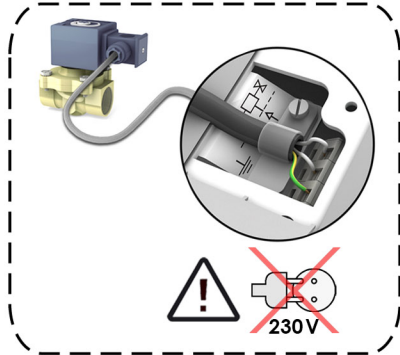

8 PINS CONNECTORS RJ45

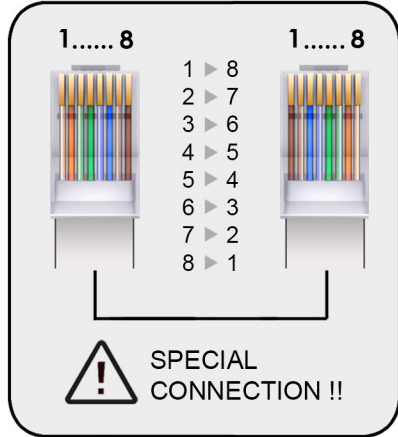

TO UNIT 4, 5 ... UP TO 12

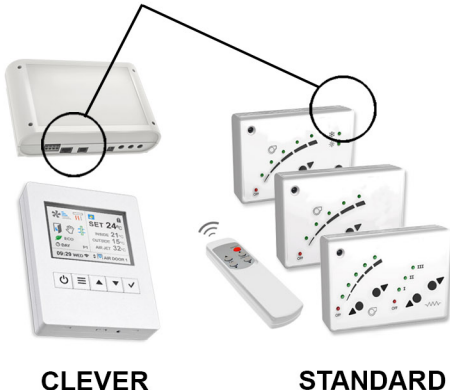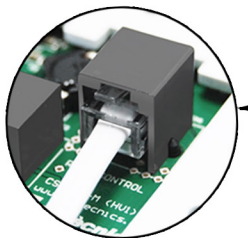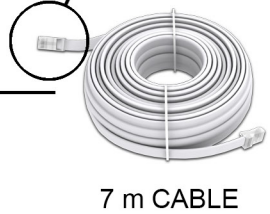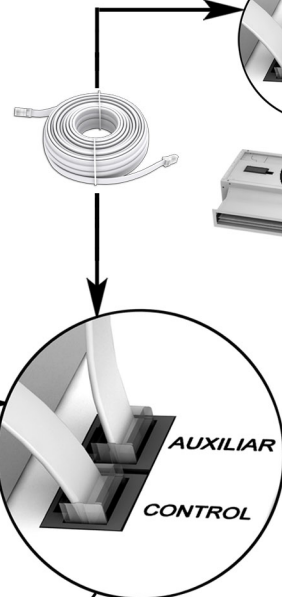
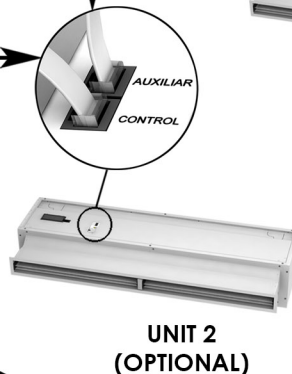
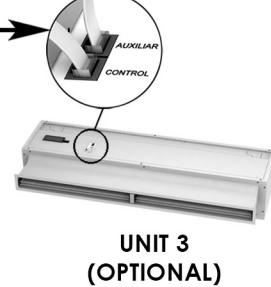


1~PHASE

3~PHASE

3~PHASE

EXTERNAL CONNECTION BOX

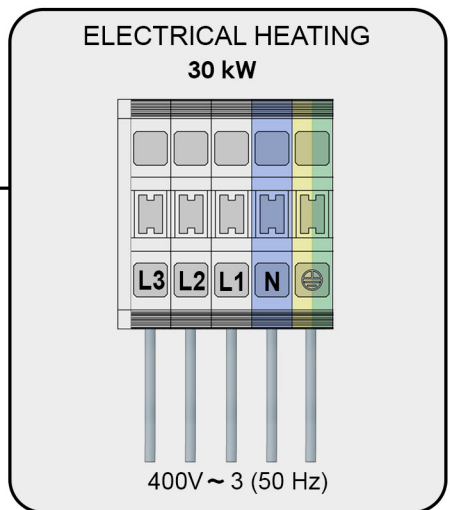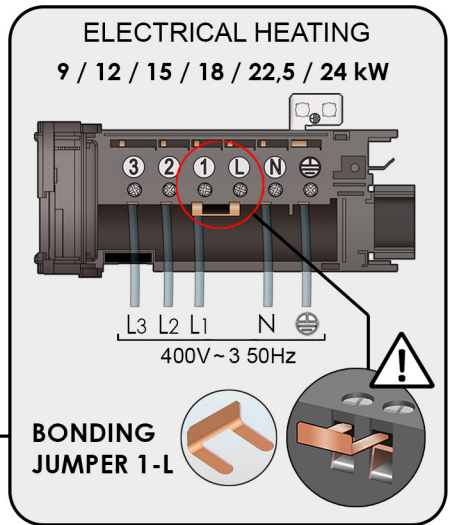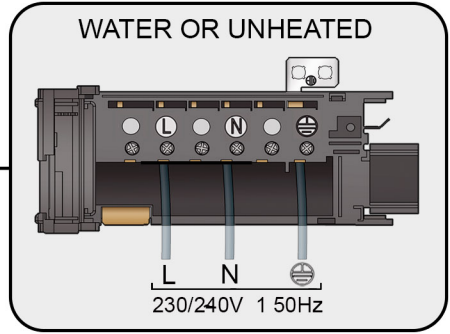

INTERNAL CONNECTIONS

Open Service Panel to enter into the internal area

UNIT 1 (MASTER)