



8 PINS CONNECTORS RJ45

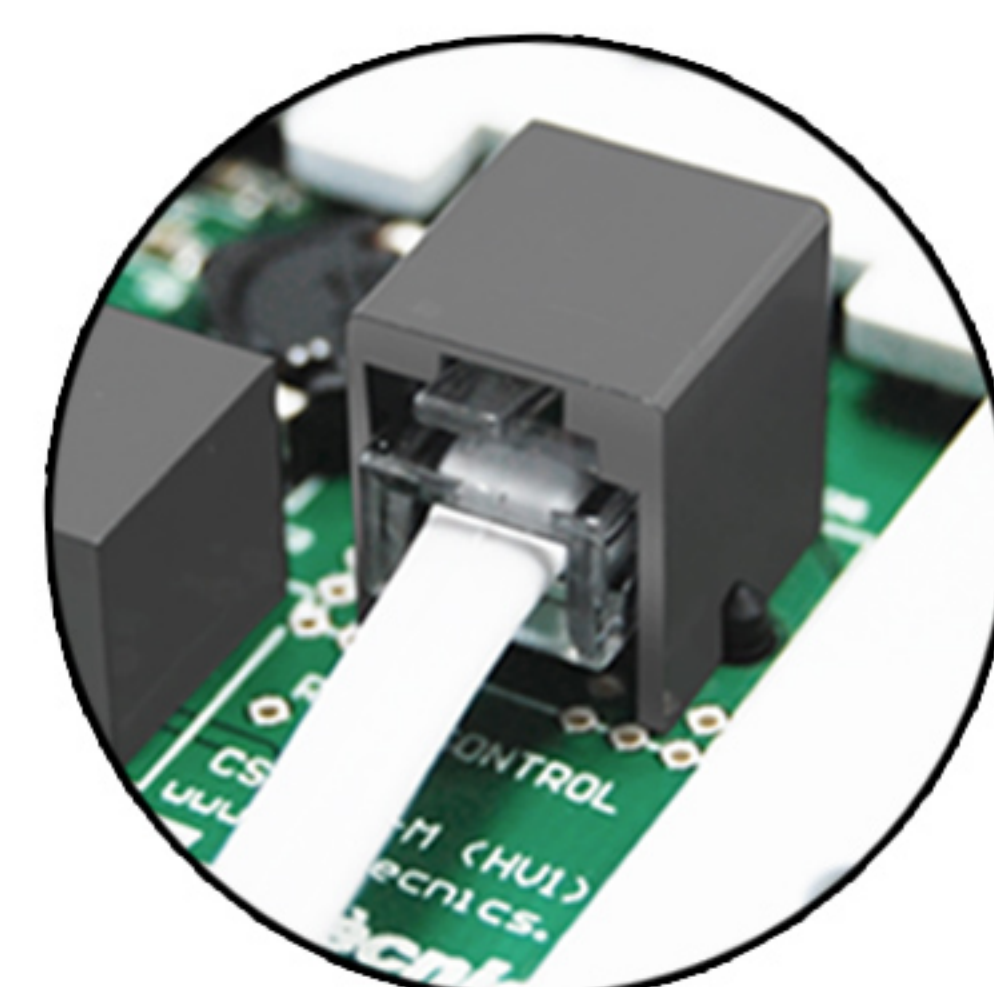


CONTROL

10 m CABLE

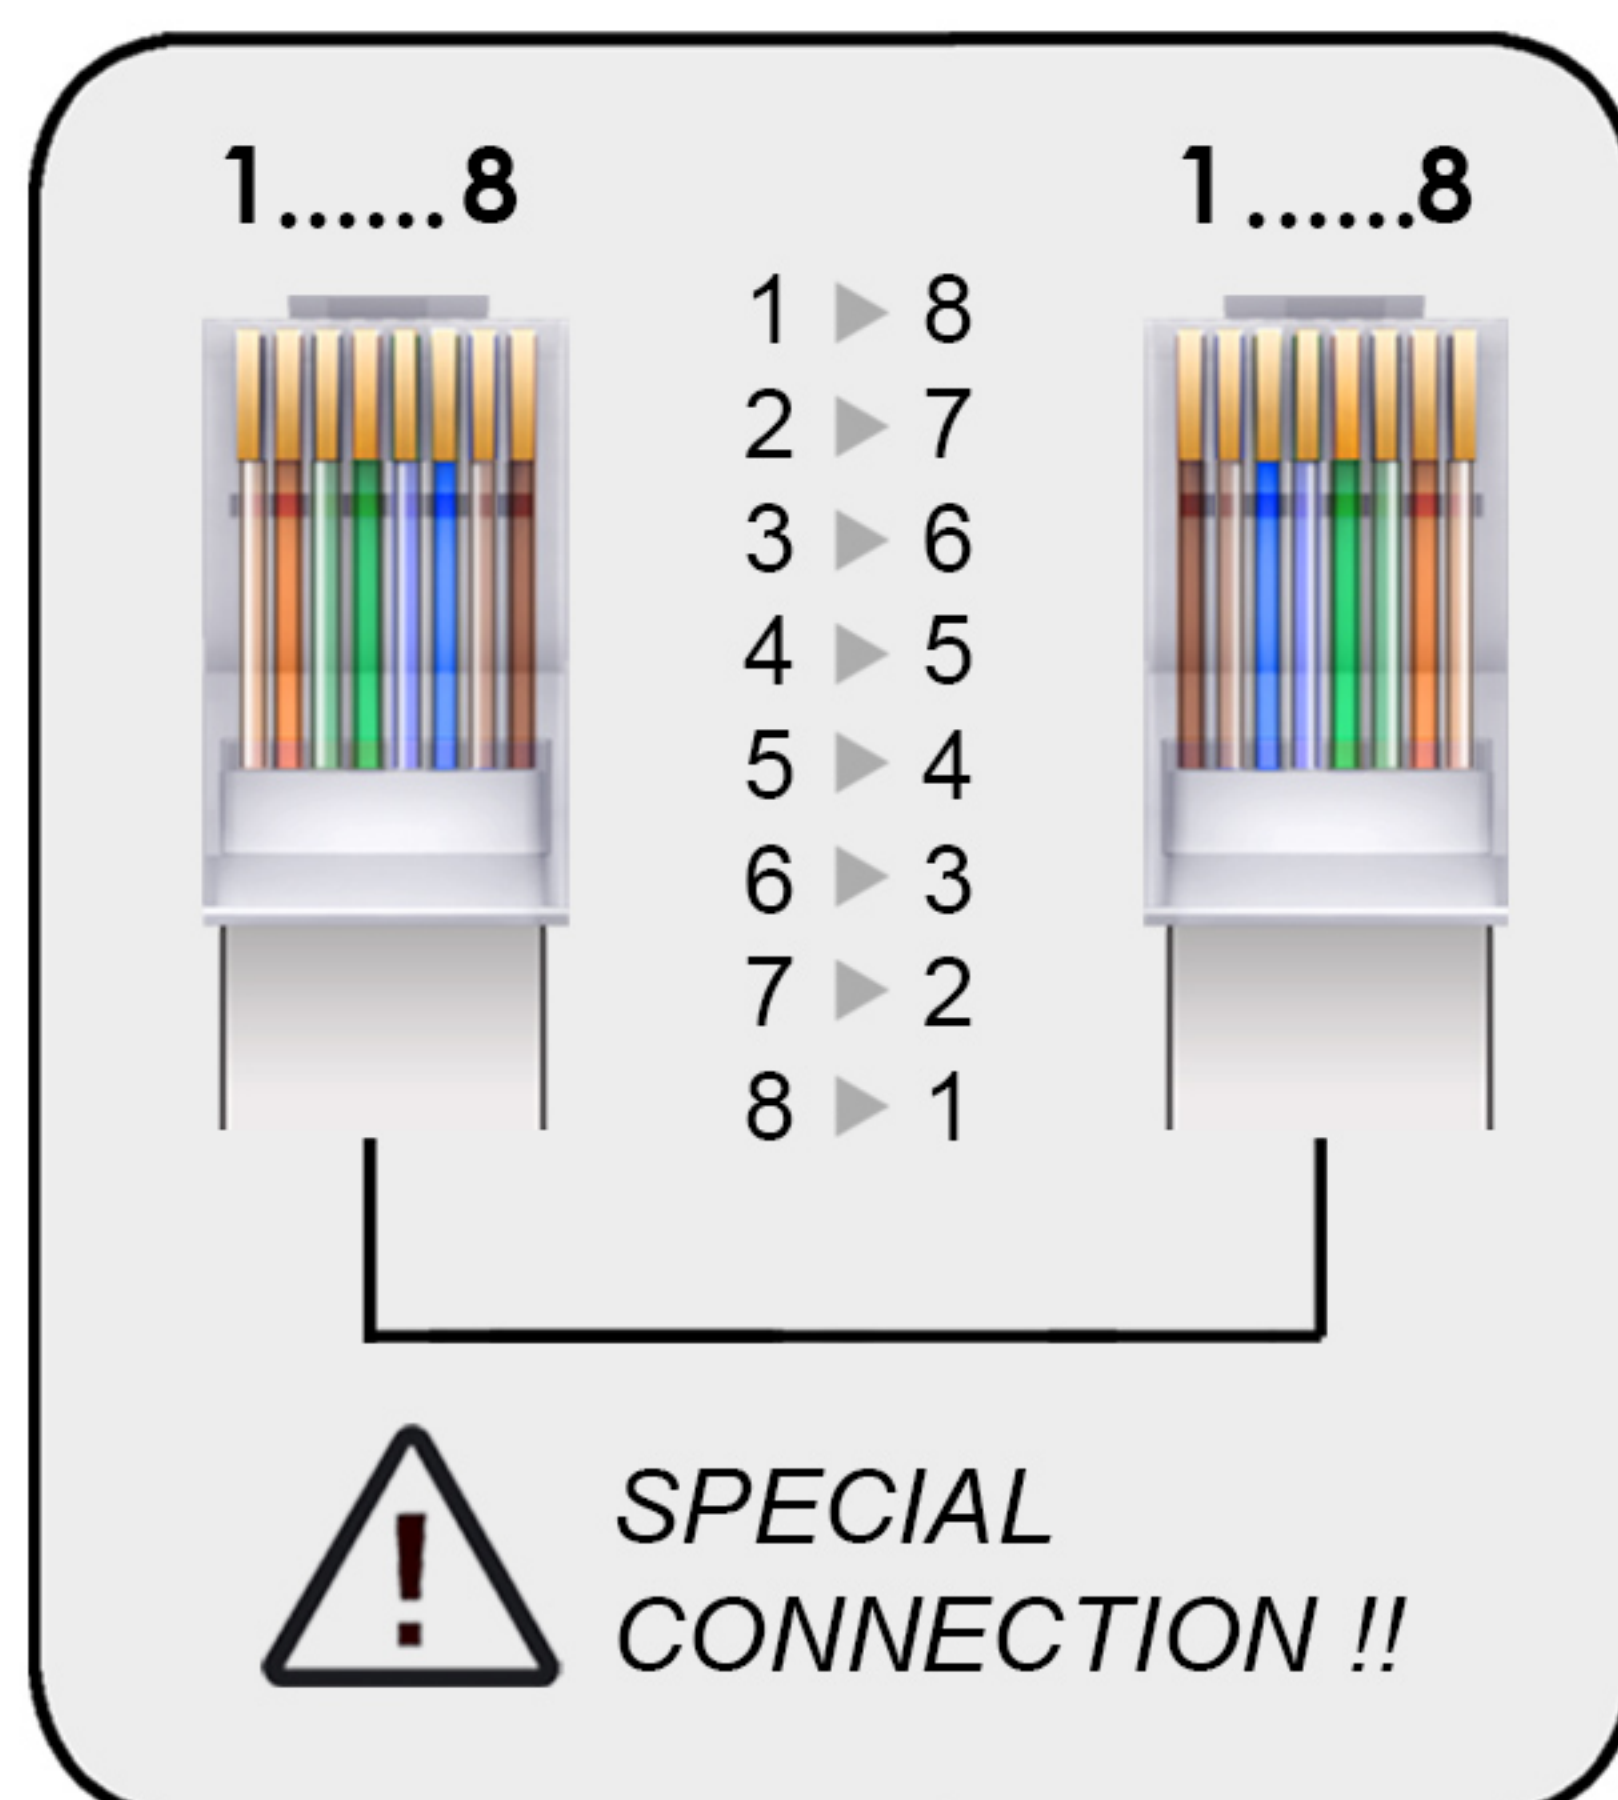

EXTERNAL CONNECTIONS BOX

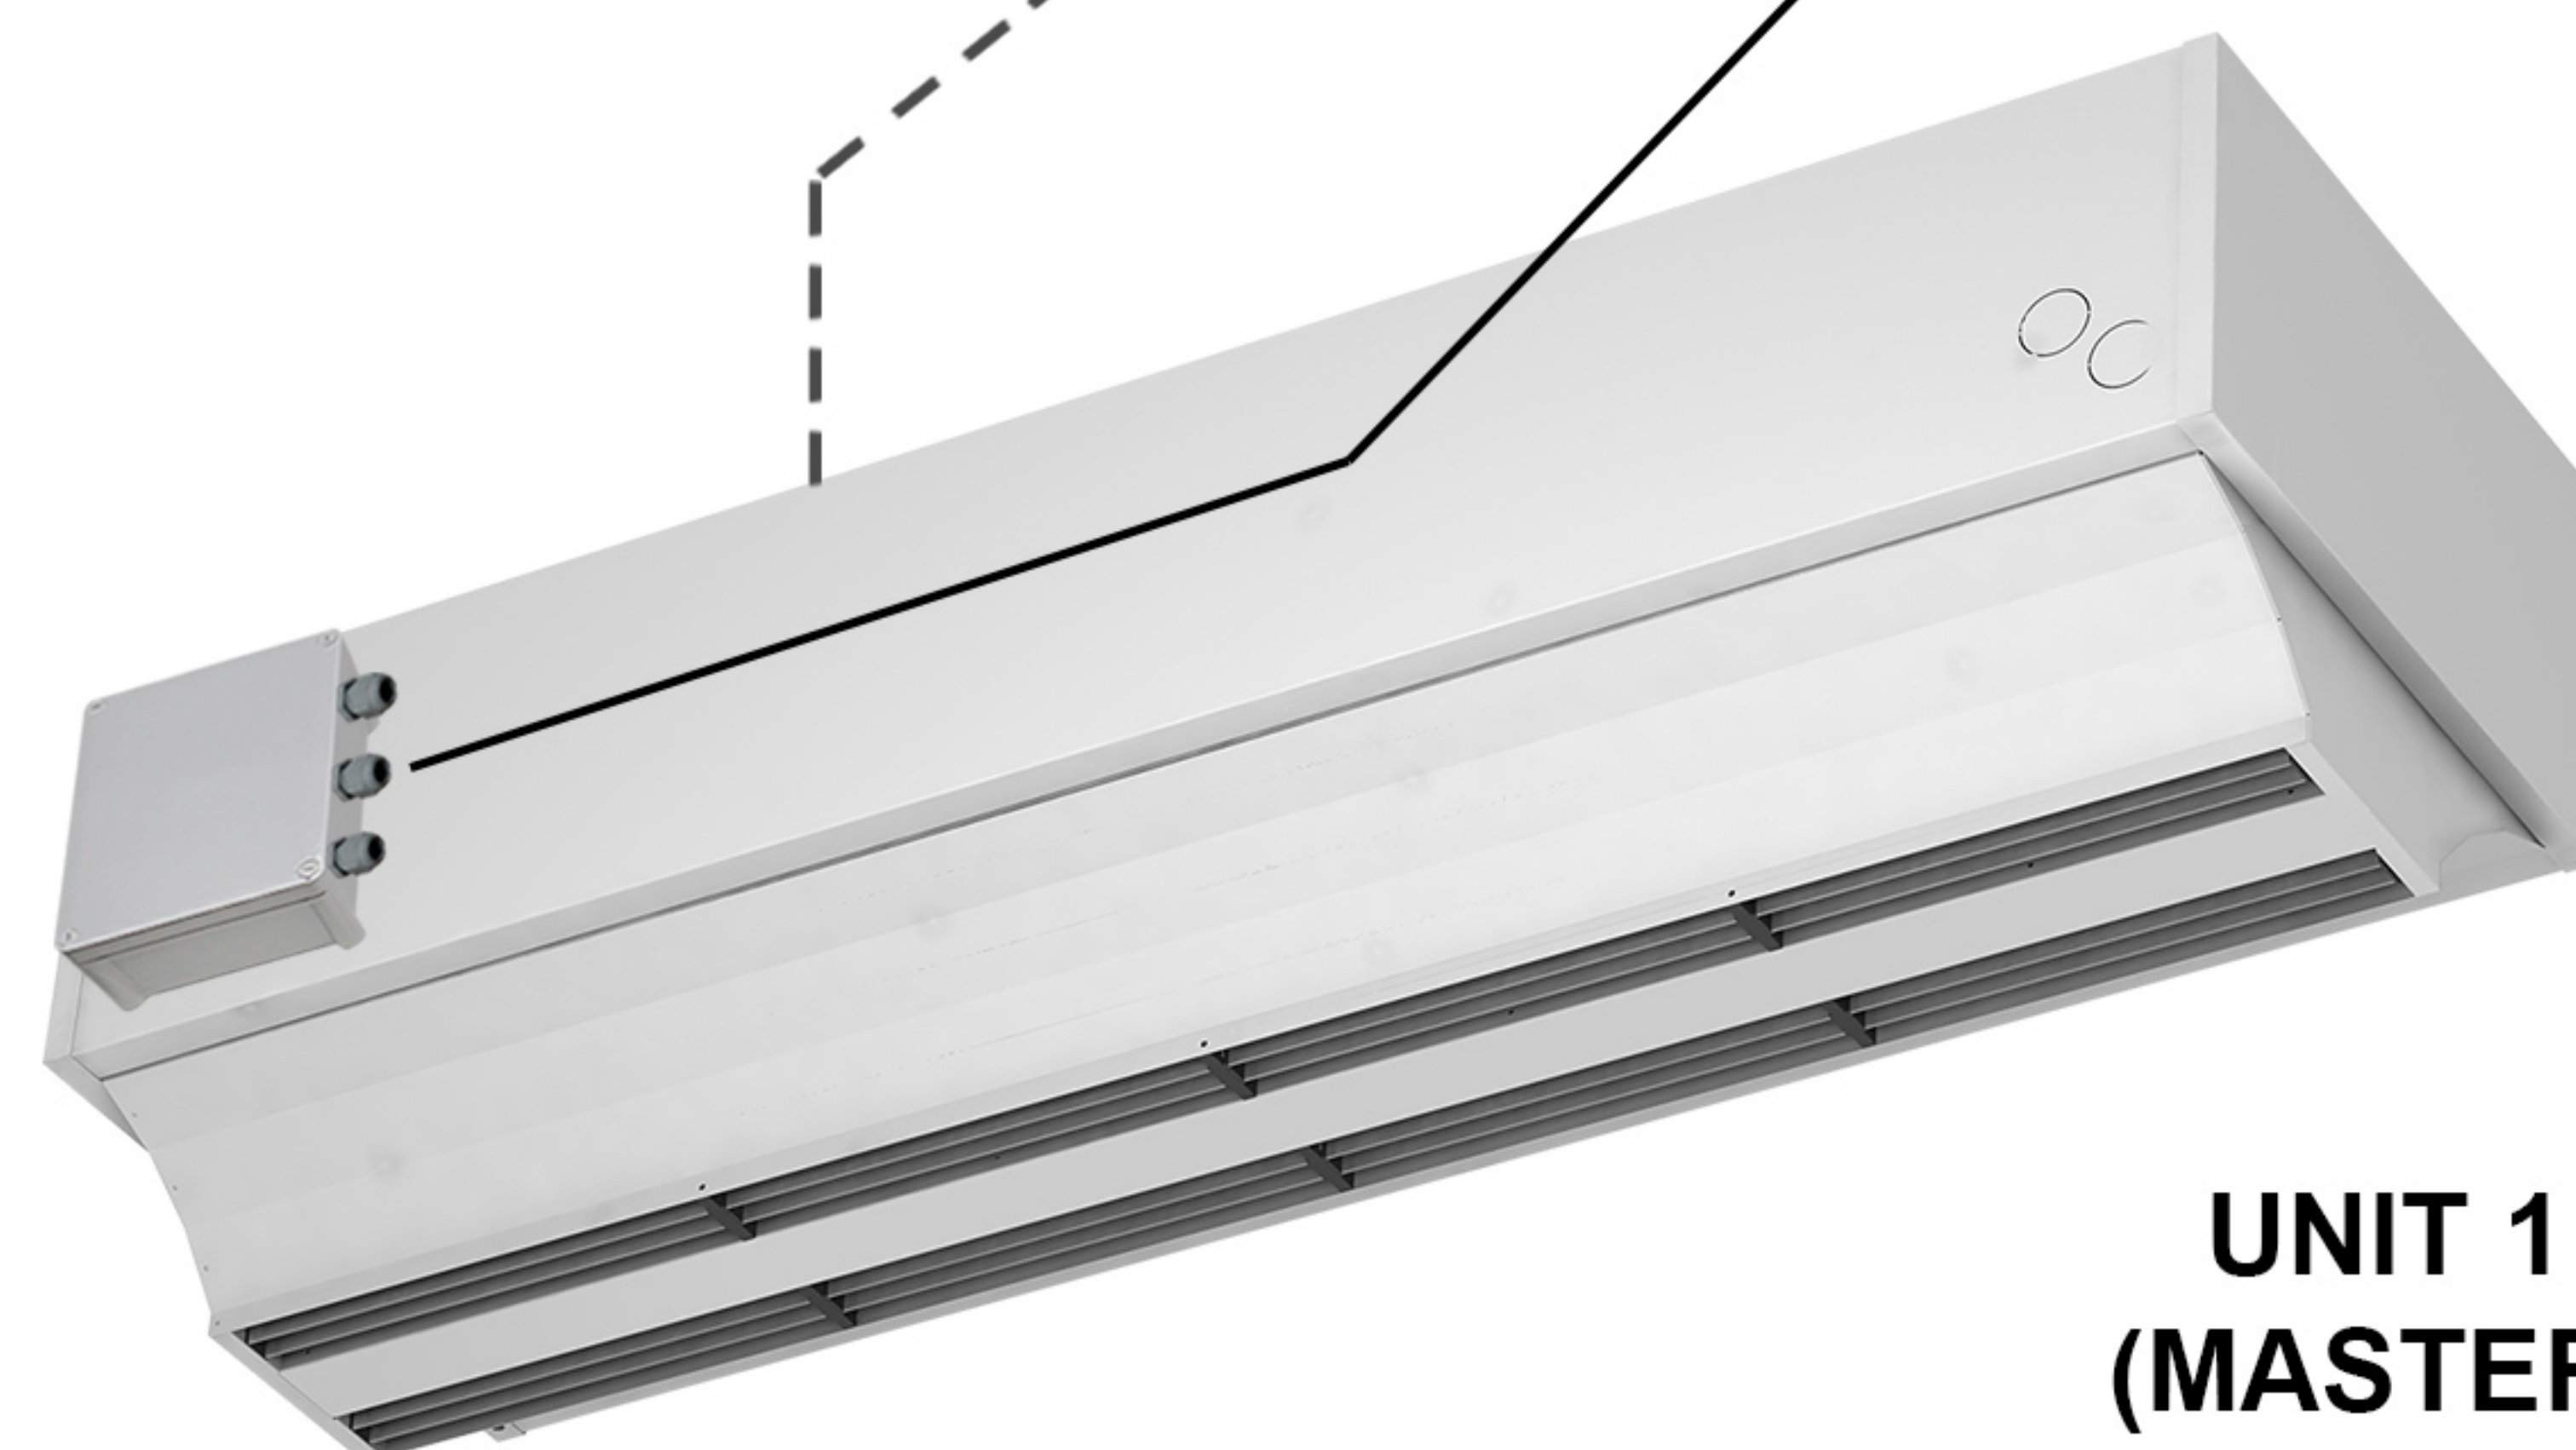

UNIT 2 (OPTIONAL)

UNIT 3 (OPTIONAL)



TO UNIT 4, 5 ... UP TO 12


ELECTRICAL HEATING

1. Remove the external connection box cover



2. Connect the cables at the electrical element as the picture shows:

400V ~ 3 (50 Hz)

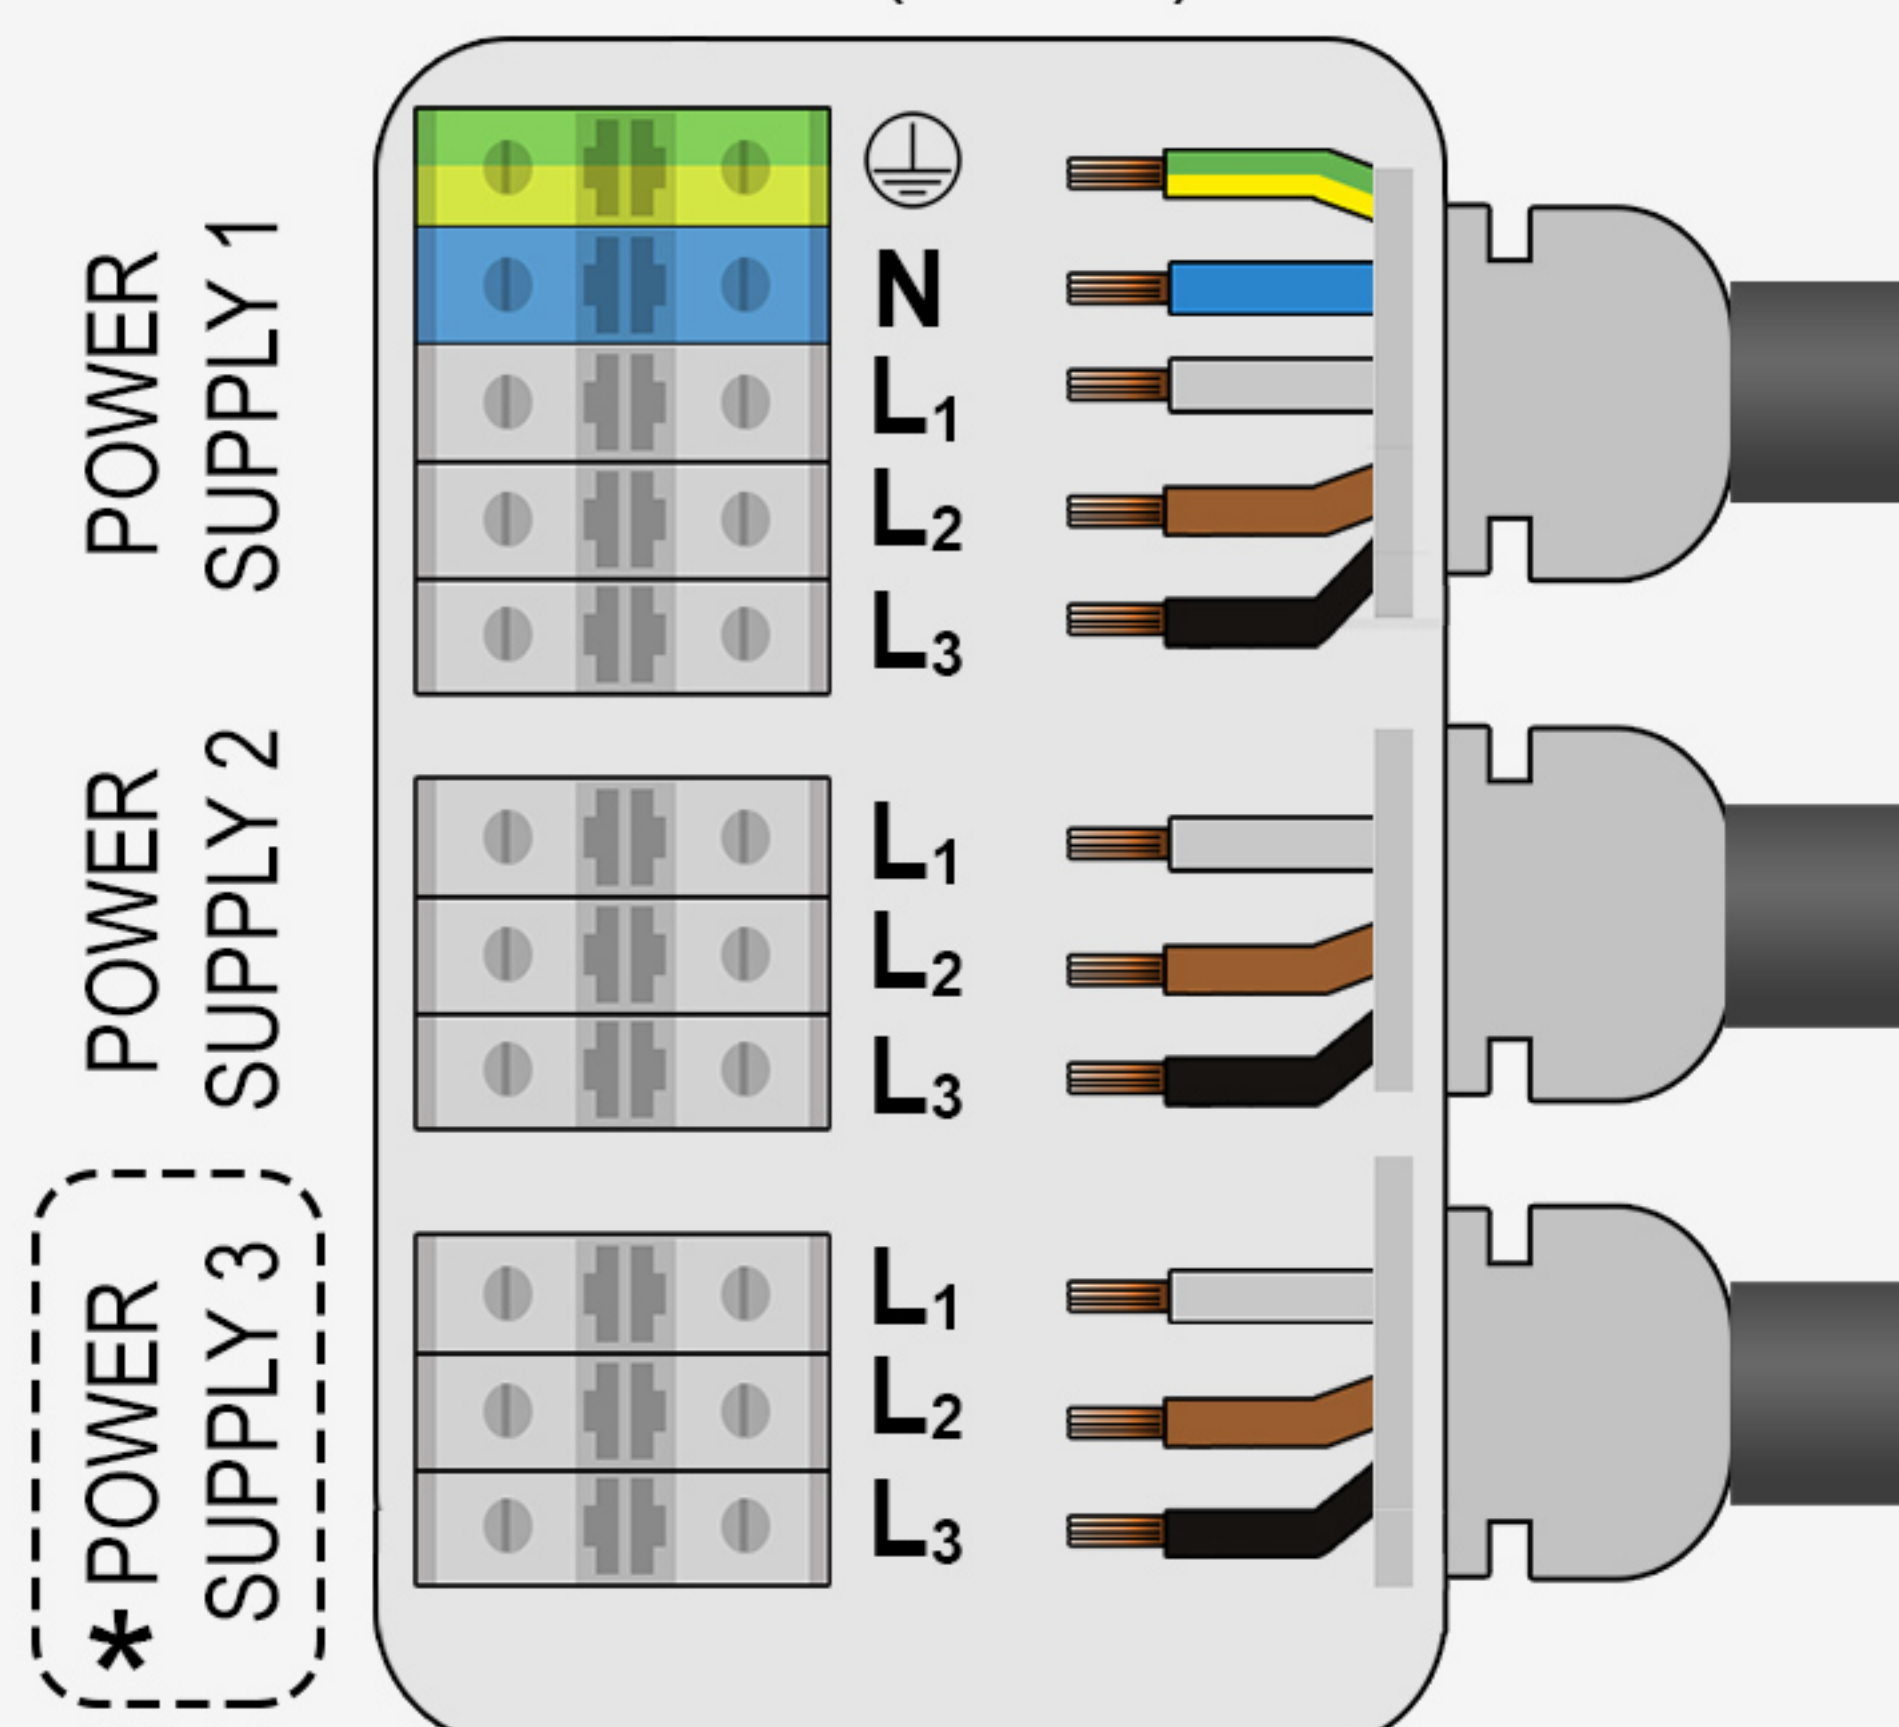

(*) "Power Supply 3" only for Maxwell 2500, 3000 and 3500

