


Windbox L,XL models with 2 PCB

50 Hz	L	-	2500	3000
	XL	-	2500	3000
60 Hz	L	-	2500	3000
	XL	2000	2500	3000

8 PINS CONNECTORS RJ45

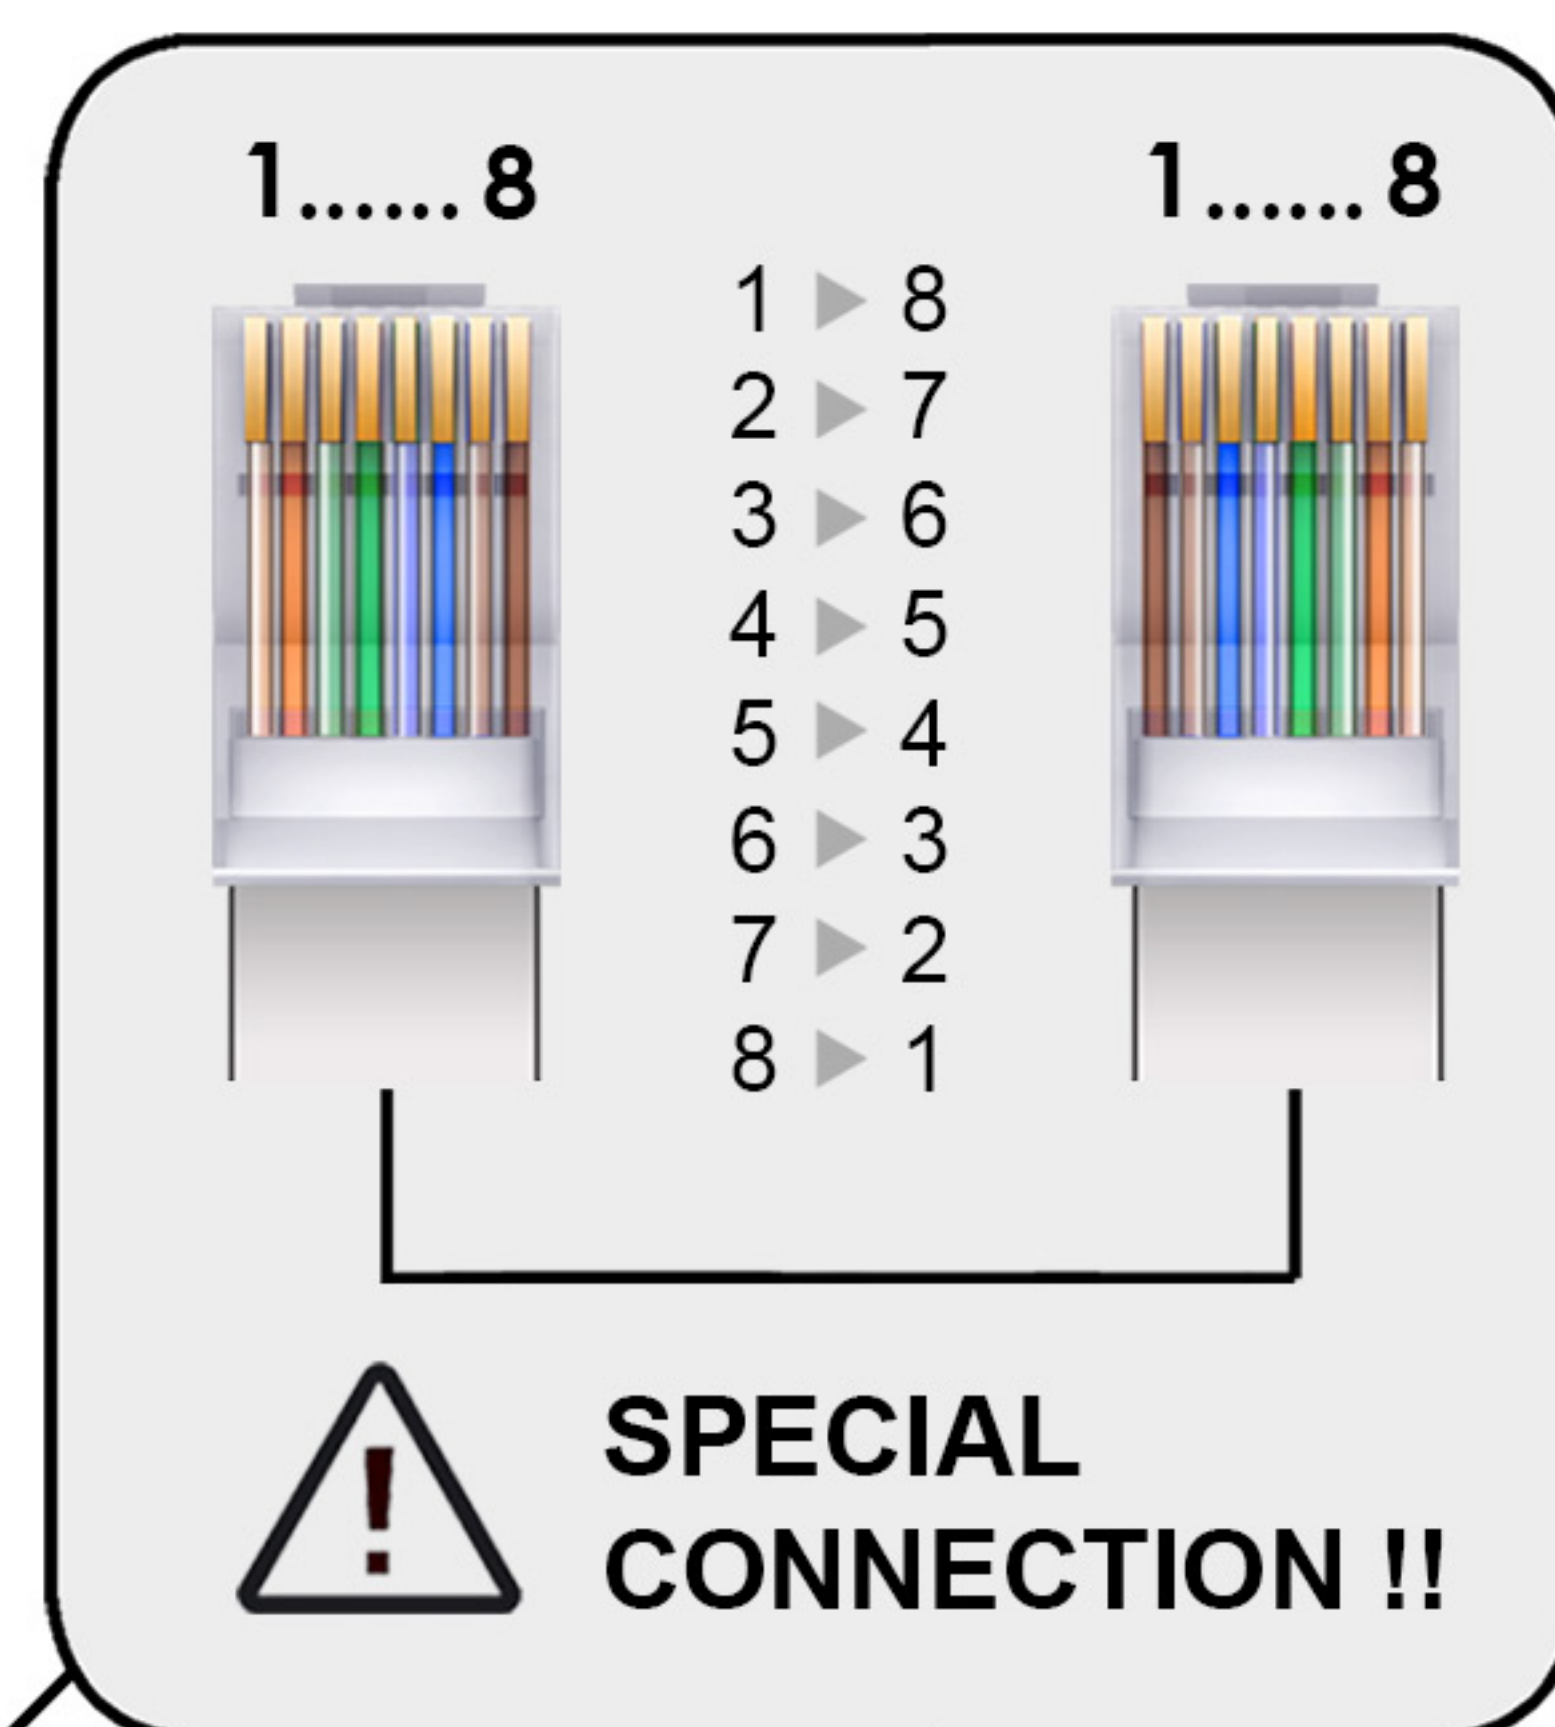


TO UNIT 4, 5 ... UP TO 12


CONTROL

ELECTRICAL HEATING


1. Open the service door.

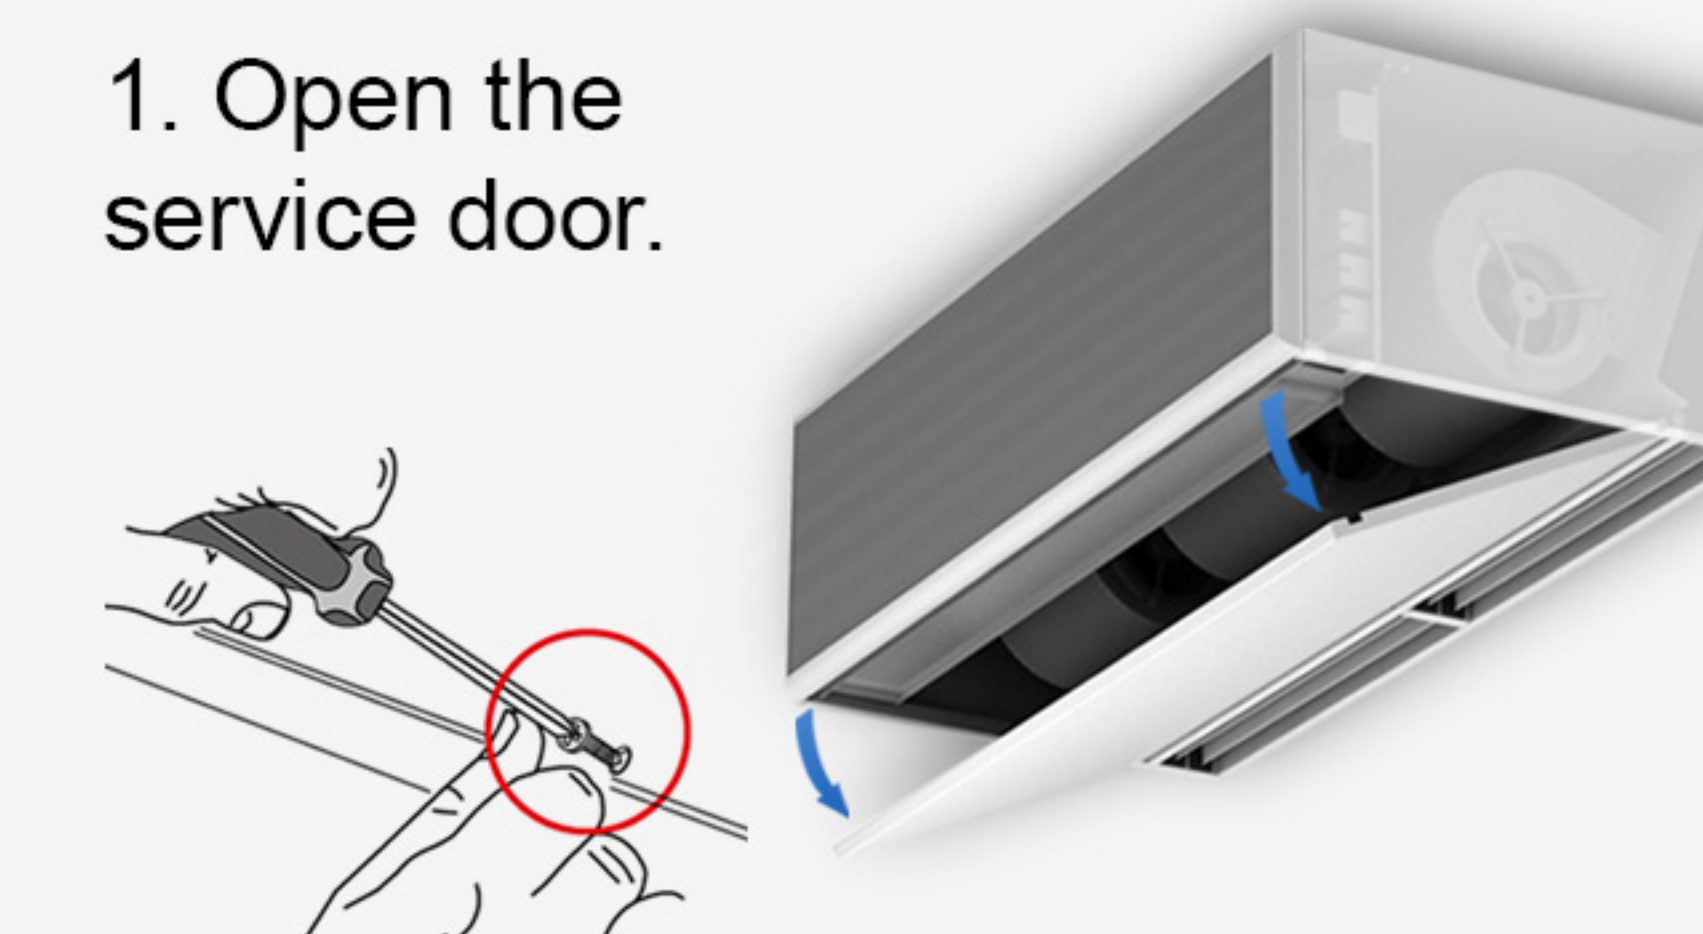


2. Pass the cable through the hole down to the power terminal.

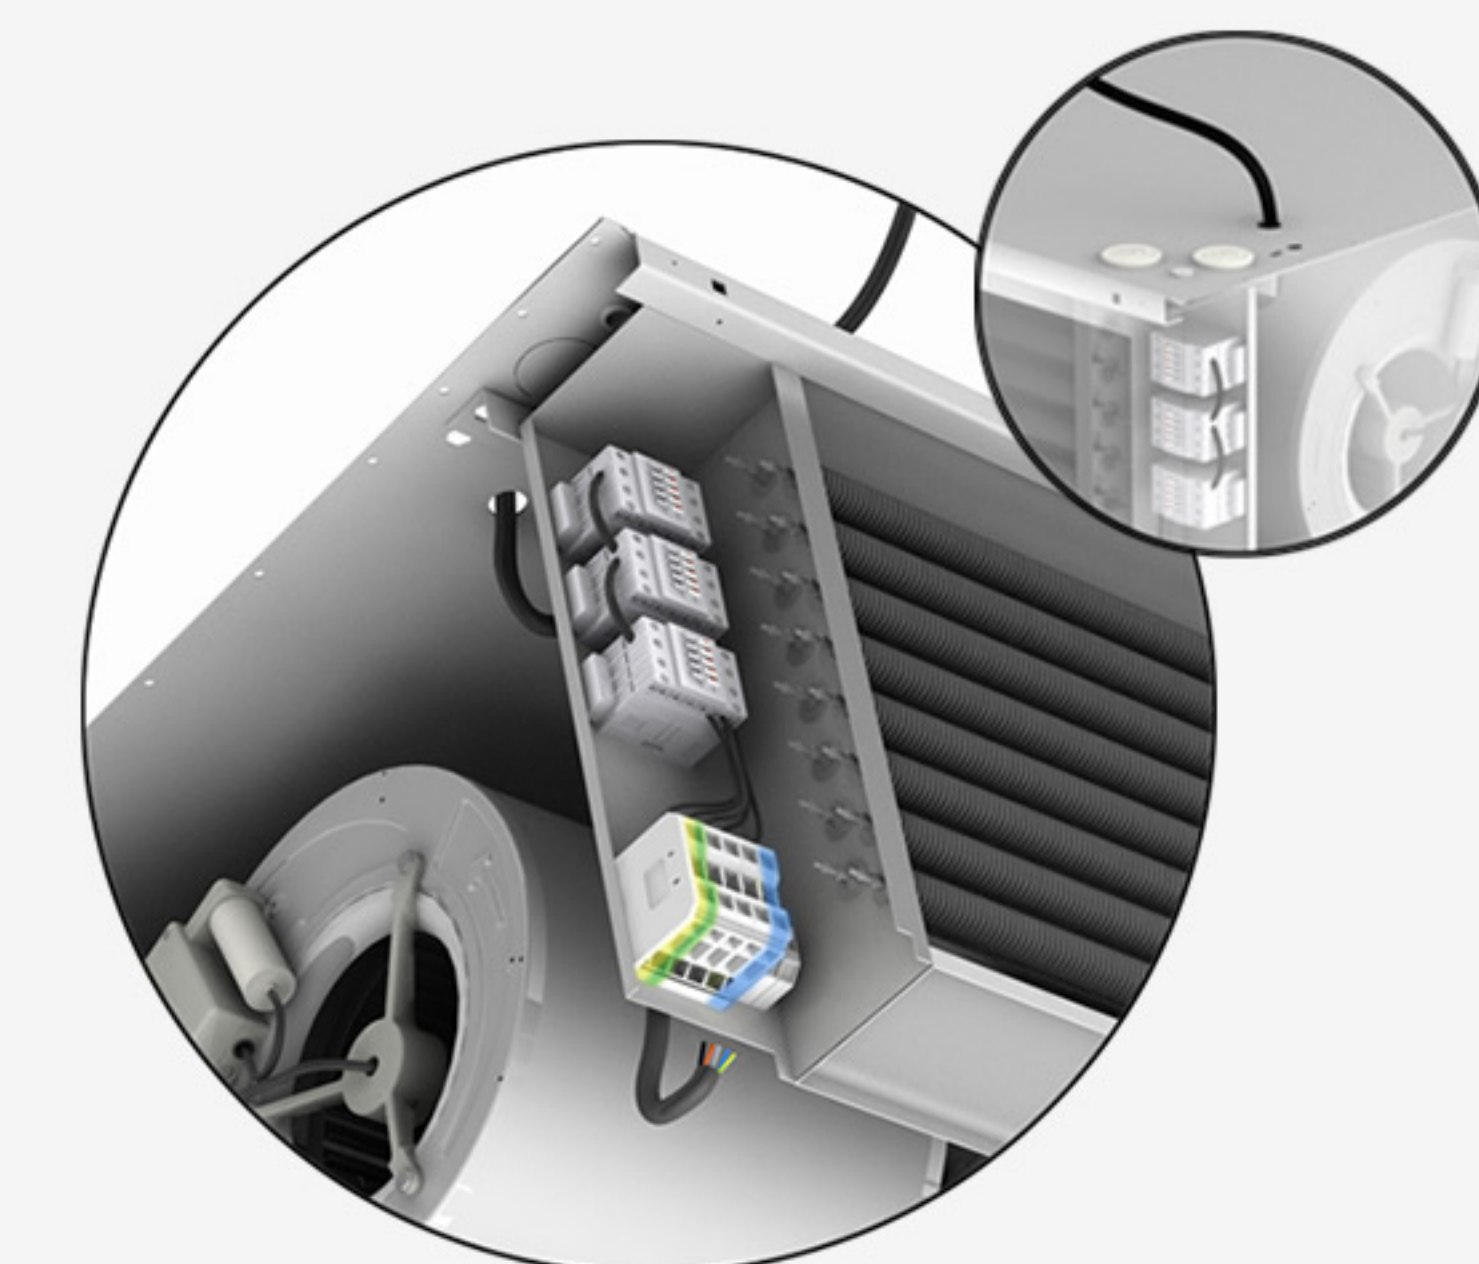

3. Connect the cables at the electrical element as the picture shows:

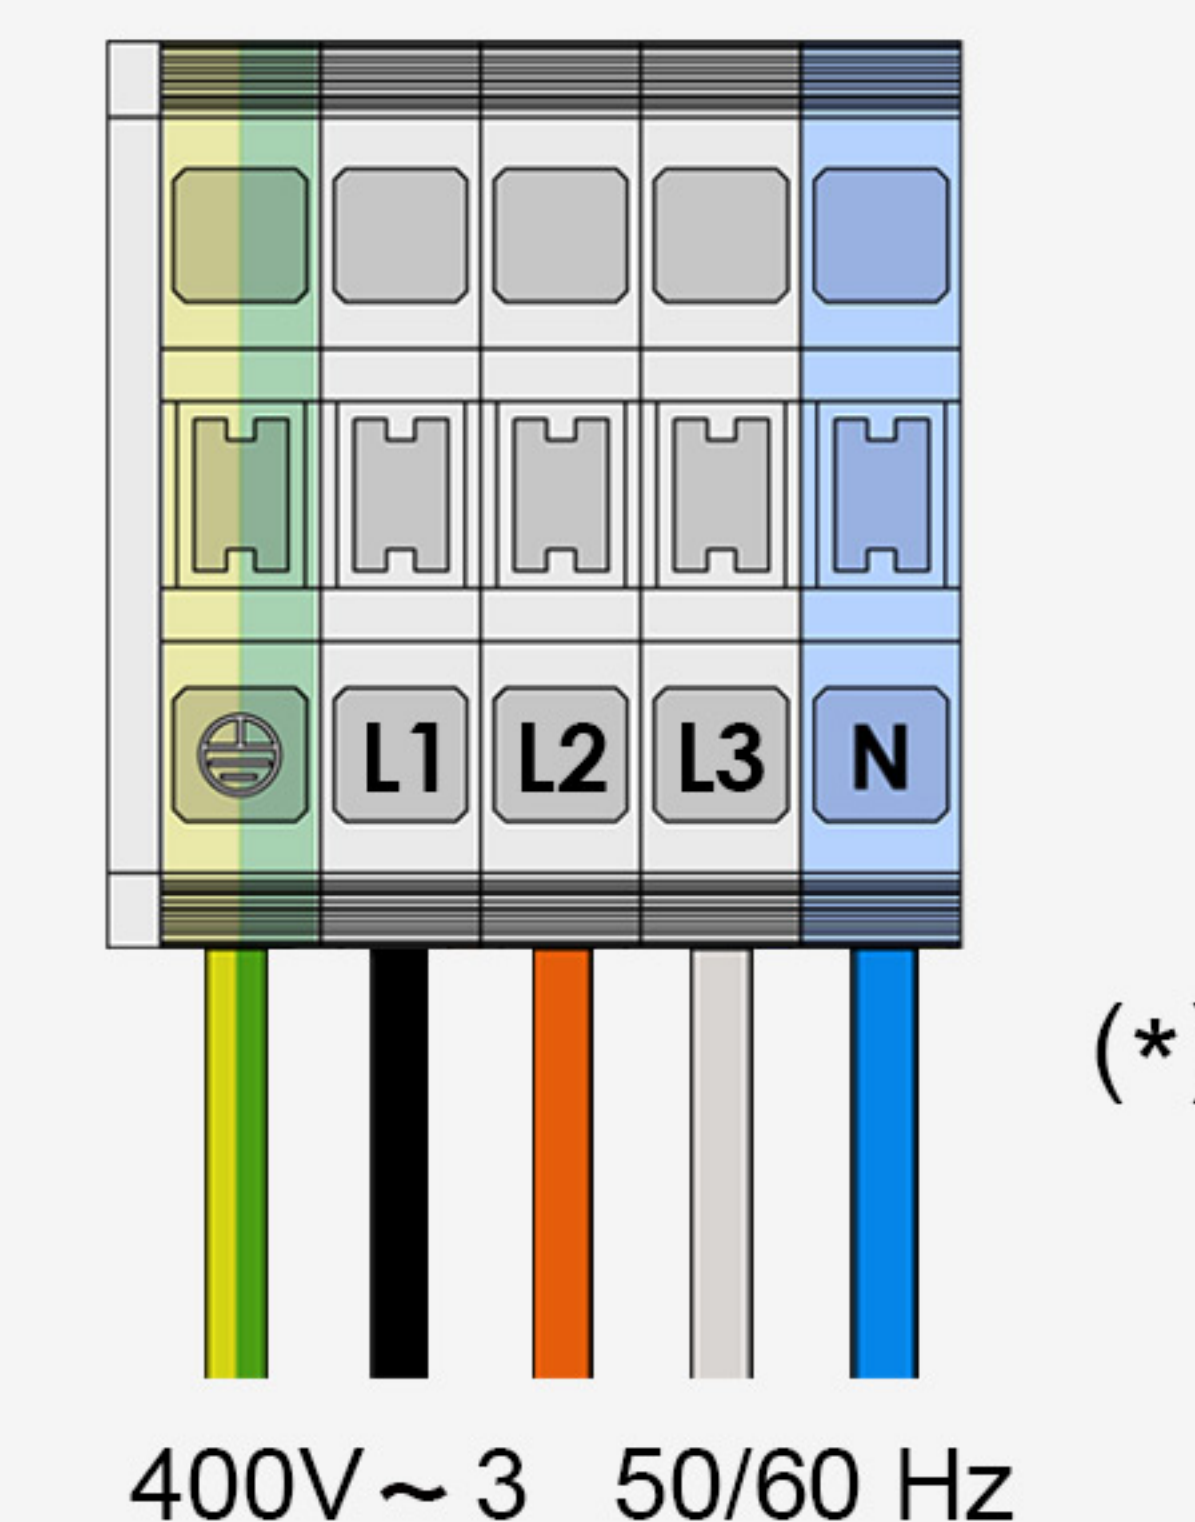


(*) Depending on the power of electrical heating, you may need two or three separated power supply lines

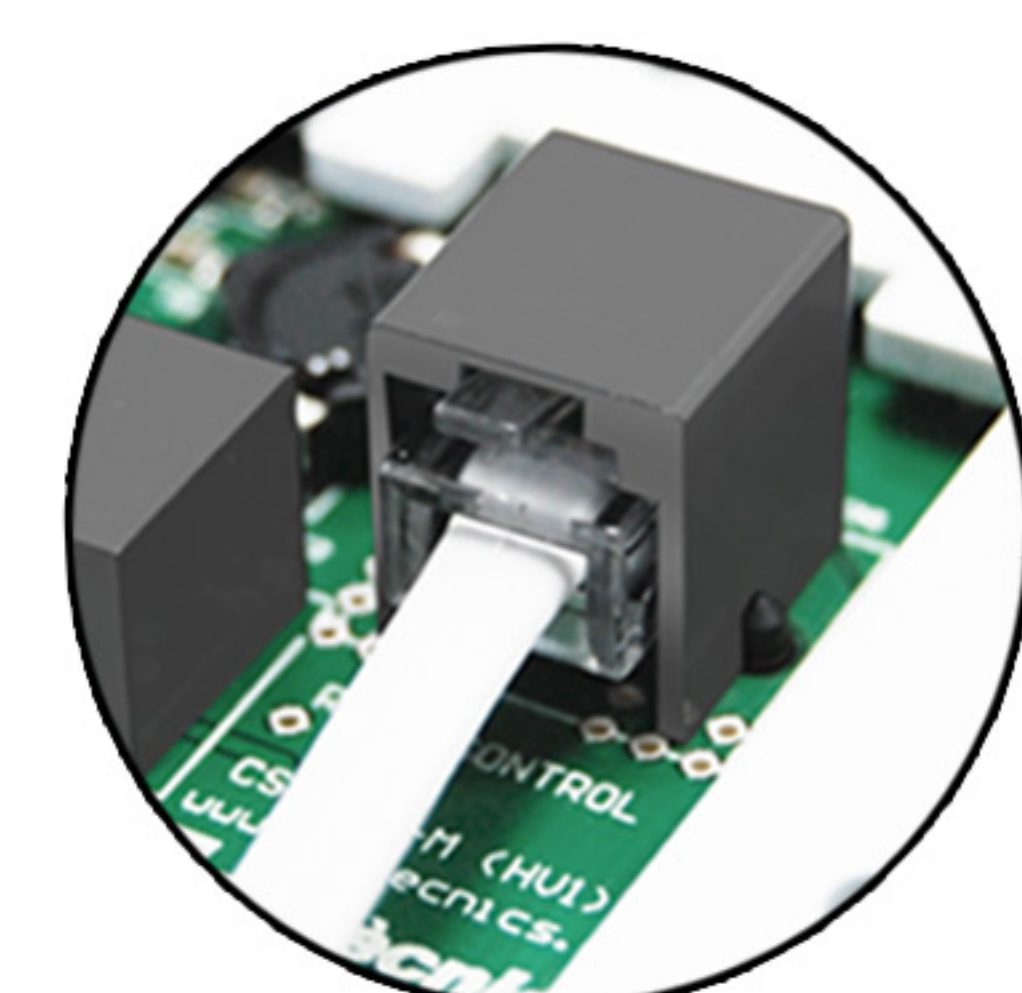


CONTROL

10 m CABLE

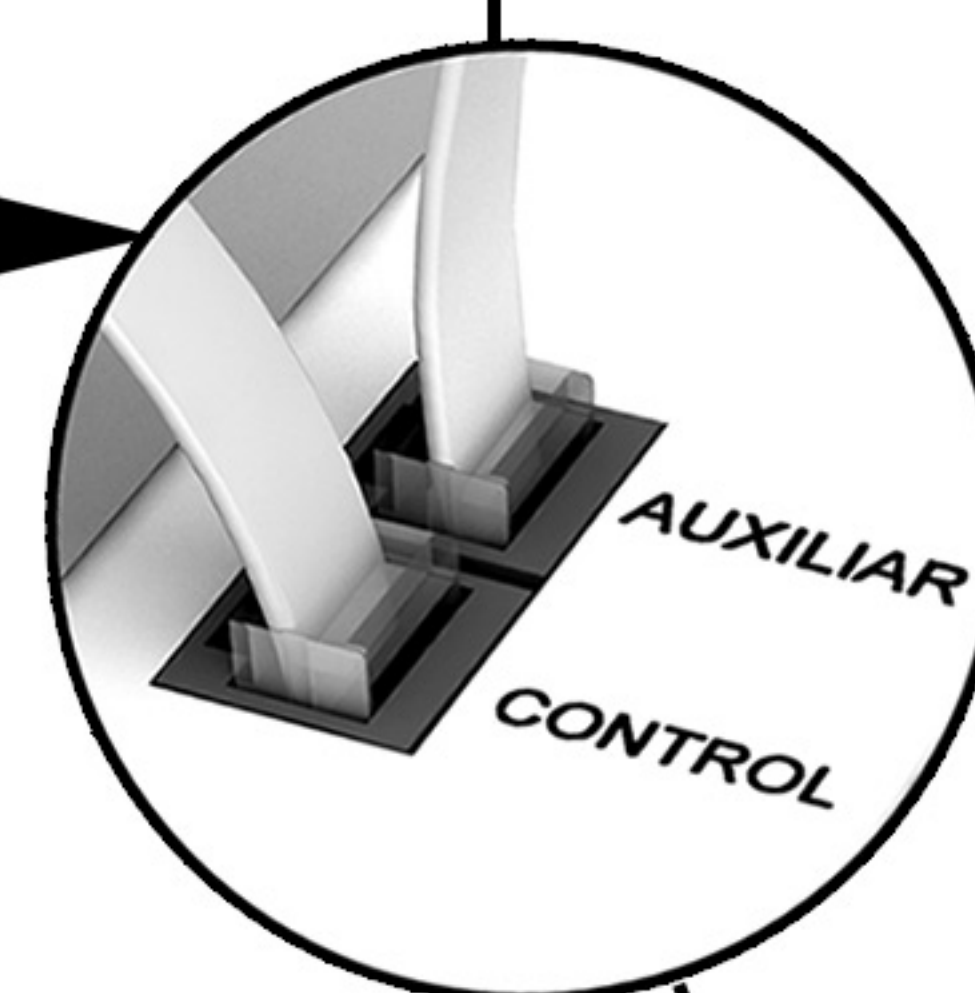

UNIT 2
(OPTIONAL)

UNIT 3
(OPTIONAL)

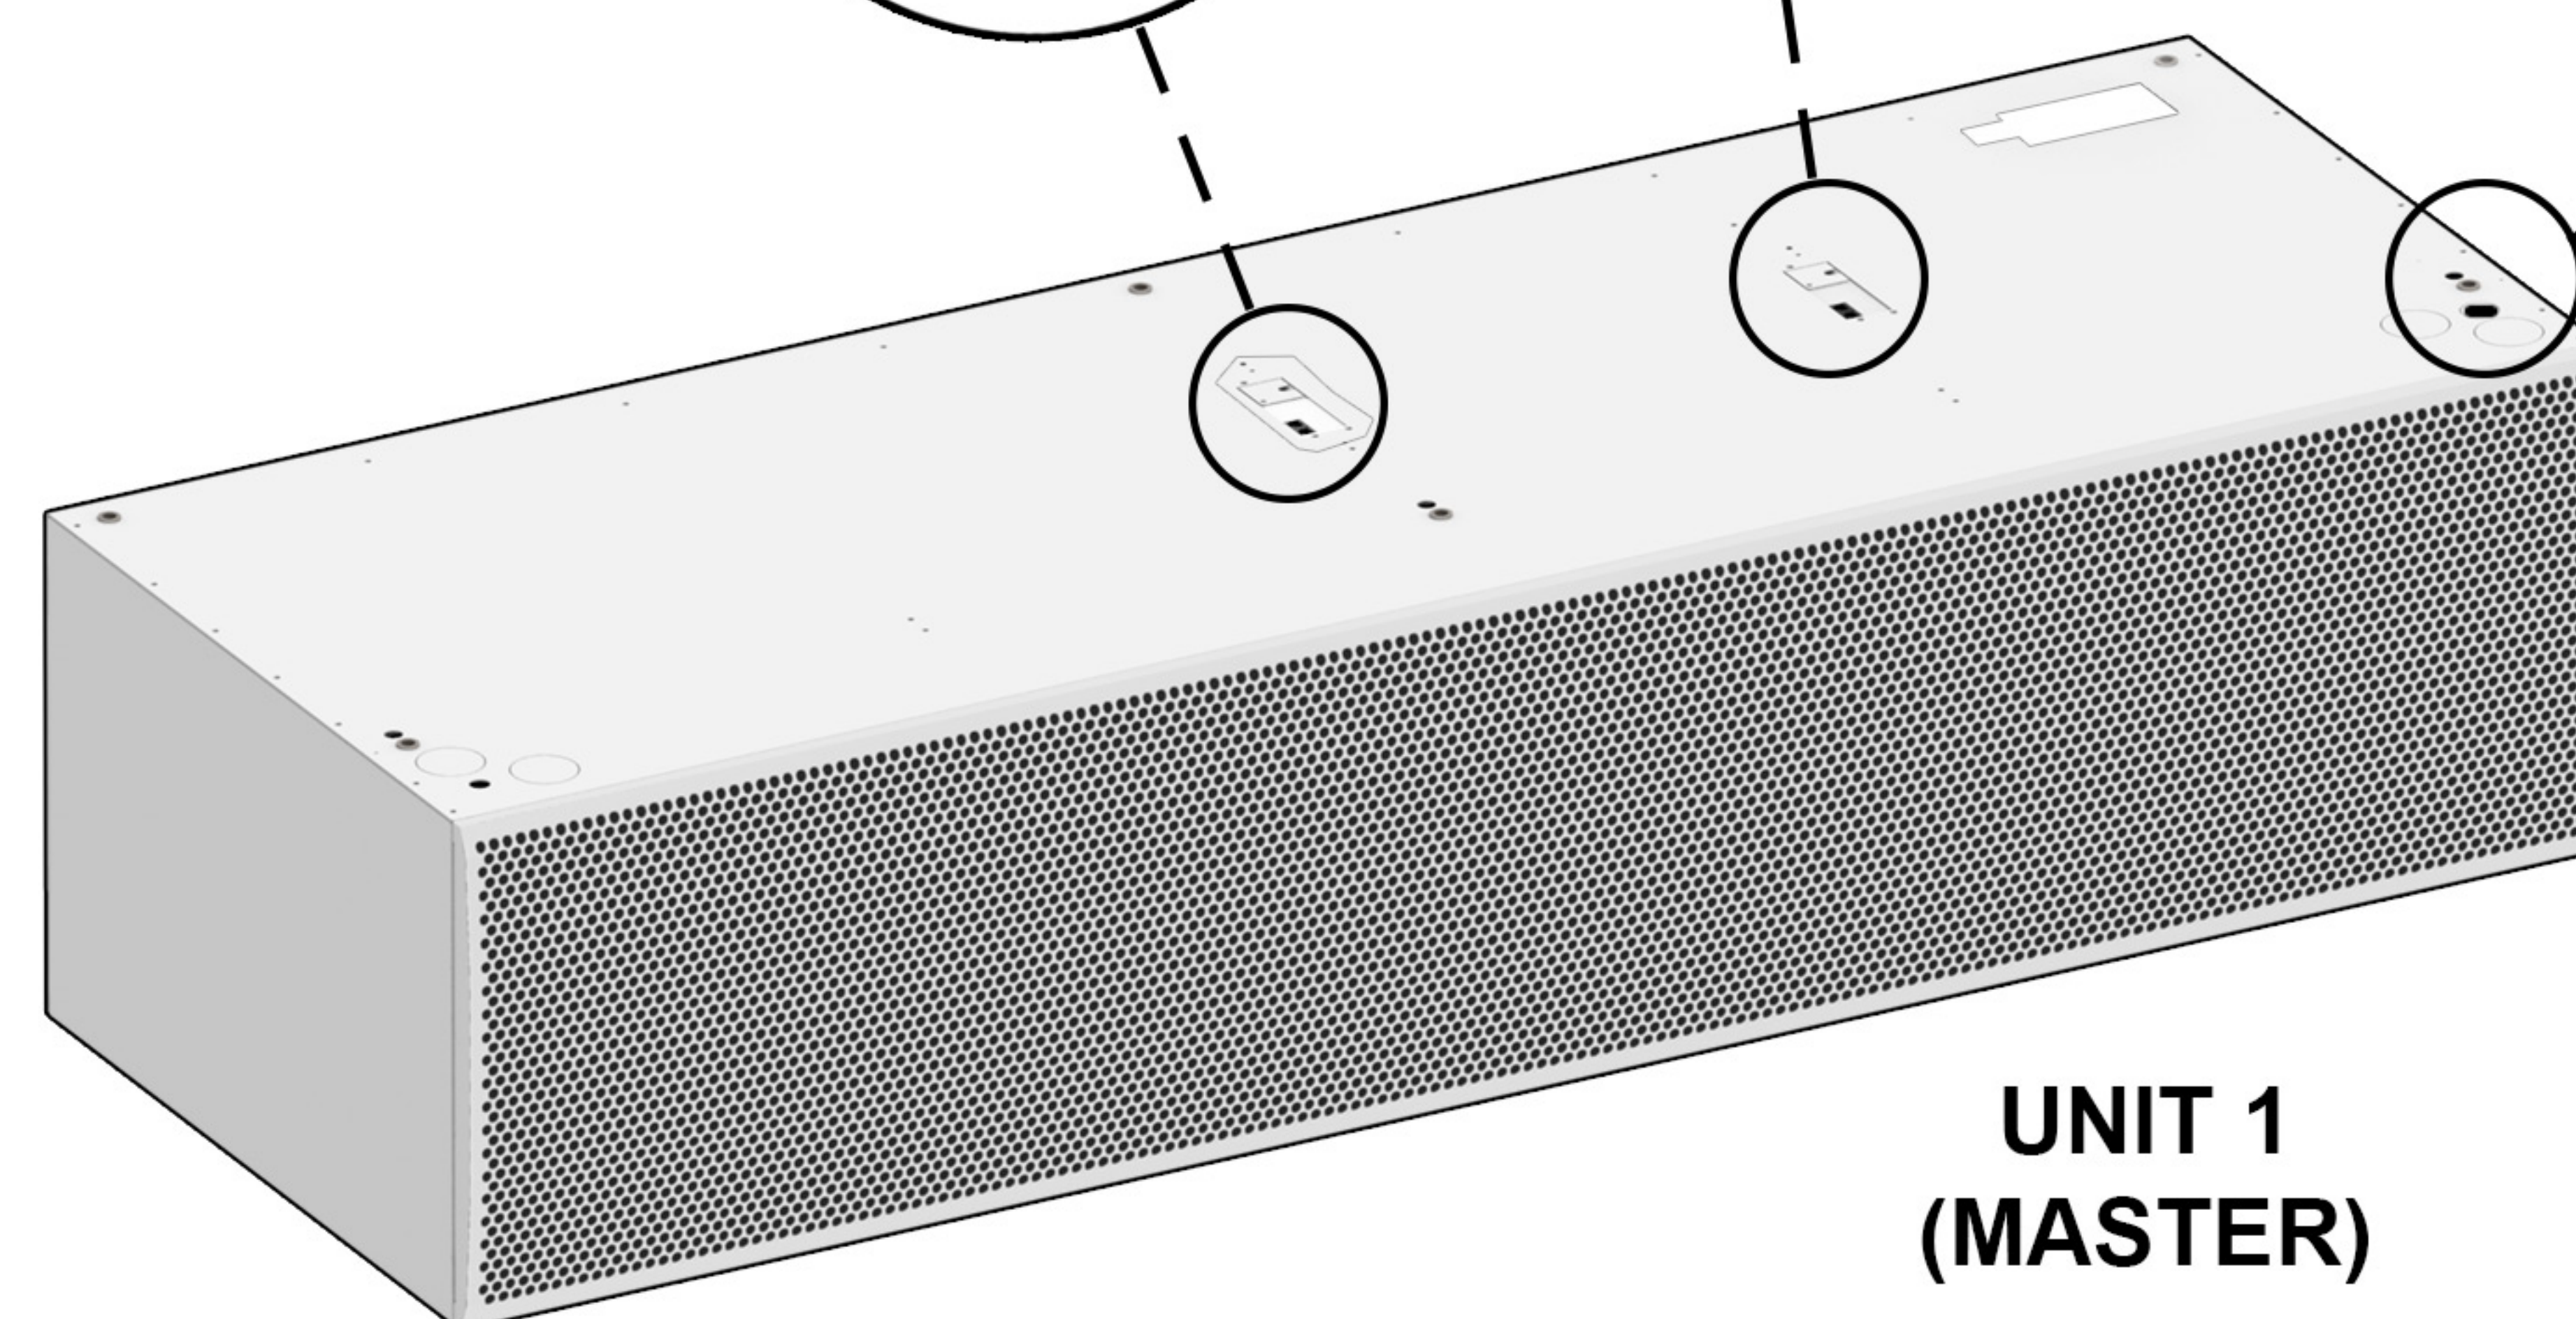

CLEVER



STANDARD