TO UNITS 4, 5 ... UP TO 12

CONTROL

8 PINS CONNECTORS RJ45

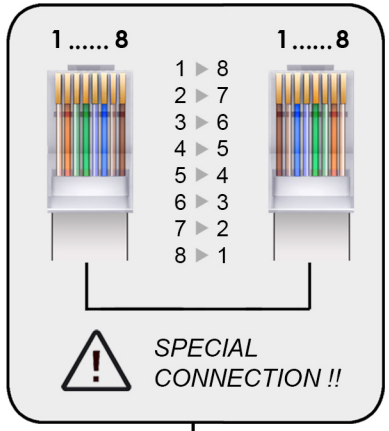

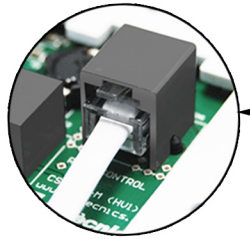

CONTROL

7 m CABLE

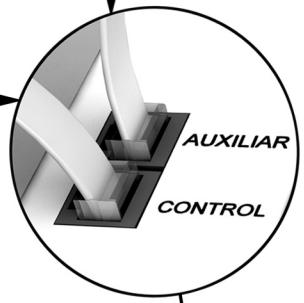

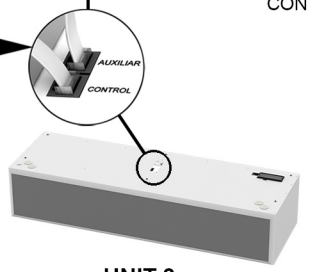

UNIT 3
(OPTIONAL)

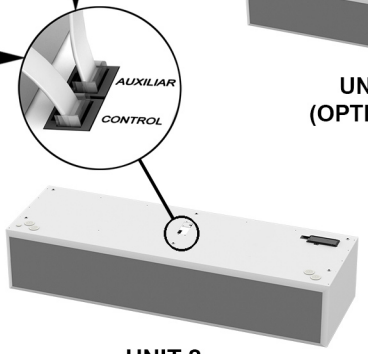

UNIT 2
(OPTIONAL)

CLEVER
CONTROL

BASIC STANDARD

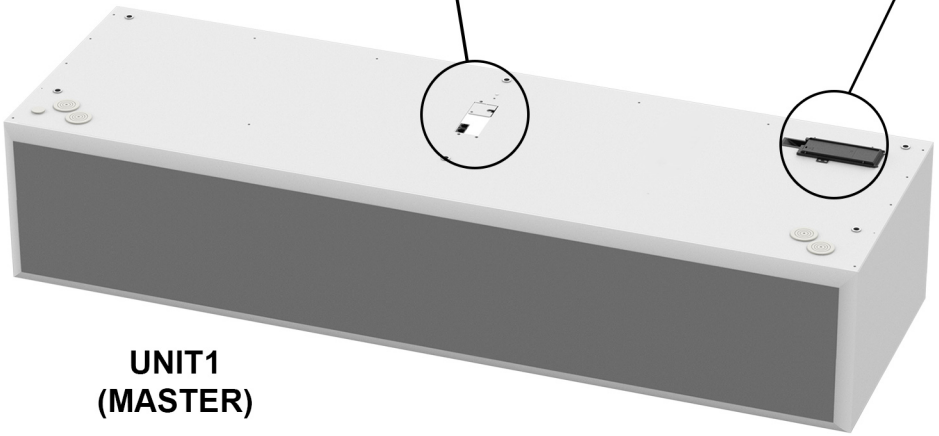

UNIT1
(MASTER)

ELECTRICAL HEATING

1. Open the service door.

2. Pass the cable through the holedown to the power terminal.

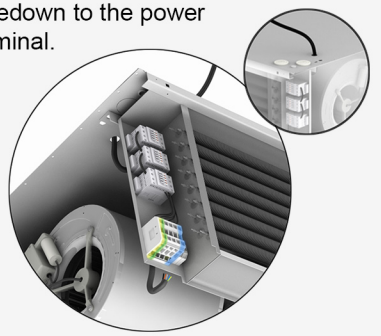

3. Connect the cables at the electrical heating element as the picture shows:

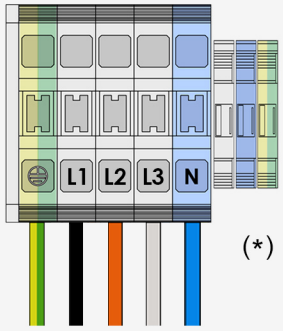

(*)

400V ~ 3 (50 Hz)

(*) Depending on the power of electrical heating, you may need two or three separated power supply lines